



100,000BTU/HR SPACE WARMER PARAFFIN/ KEROSENE/DIESEL HEATER

MODEL NO'S: **AB1008.V3, AB1258.V3, AB1758.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Warning: Hot surface



Warning: Automatic start up



Warning!

THIS PRODUCT IS NOT SUITABLE FOR PRIMARY HEATING PURPOSES

1. SAFETY

1.1. ELECTRICAL SAFETY


- WARNING!** It is the user's responsibility to check the following:

Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.

If the heater is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
 - * **DO NOT** pull or carry the appliance by the power cable.
 - * **DO NOT** pull the plug from the socket by the cable.
 - * **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.
 - If the cable or plug is damaged during use, switch the electricity supply and remove from use. Ensure that repairs are carried out by a qualified electrician.
 - Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight. Sealey recommend that repairs are carried out by a qualified electrician.
- 1.1.10 If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

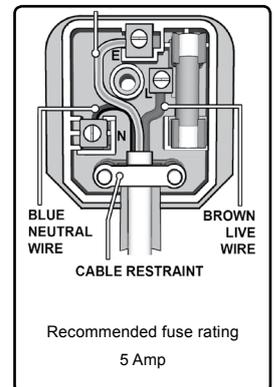

1.2. GENERAL SAFETY

- DANGER!** Risk of carbon monoxide poisoning. Failure to provide proper ventilation could result in serious illness or death.
- Check that the heater is in sound condition and good working order. Take immediate action to repair or replace damaged parts. Use recommended parts only. Unapproved parts may be dangerous and will invalidate the warranty.
- WARNING!** Only use clean paraffin, kerosene or diesel (NOT BIO-DIESEL) to fuel your heater, in accordance with instructions contained in this manual.
- WARNING!** Keep spare fuel in suitable containers and away from sources of heat or ignition.
- Keep the front of the heater a minimum of 2.5 metres from any combustible materials (i.e. wooden items, cloth, plastics, paper, tarpaulins etc).
- WARNING!** Only use in well ventilated areas. Only operate on a level and stable surface.
- WARNING! DO NOT** use the heater near flammable material, liquids, solids, gases or compressed gas cylinders.
- * **DO NOT** use the heater in closed rooms, living areas, basements or below ground level.
- * **DO NOT** allow untrained persons to operate the heater and **DO NOT** operate the heater without the cover.
- * **DO NOT** move or handle the heater when hot.
- * **DO NOT** leave the heater unattended when in use. Switch the heater off and unplug from the mains before leaving work area.
- * **DO NOT** fill the fuel tank whilst the heater is running or still hot. Stop heater and allow to cool before refuelling.
- * **DO NOT** overfill the fuel container. Wipe up any spilt fuel immediately.
- * **DO NOT** obstruct the air inlet (rear) and air outlet (front) of the heater.
- * **DO NOT** use duct work in front or at the rear of the heater.
- * **DO NOT** allow children or animals near the heater when in use, or while hot.
- WARNING! RISK OF ELECTRIC SHOCK. DO NOT** expose the heater to water spray, rain, dripping water or wind.

- × **DO NOT** operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- × **DO NOT** touch the heater outlet or dome when first switched off as these are very hot and will take time to cool.
- × **DO NOT** unplug the heater to switch it off. Use the ON/OFF switch.
- ✓ Ensure that the heater is correctly turned off when not in use. Store in a safe, dry area, with the fuel tank empty out of reach of children.

NOTE: This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

2. INTRODUCTION

Our range of paraffin / kerosene / diesel heaters represents excellent value. Workshop tried and tested. All models have an adjustable thermostat (C°) that cuts in as desired temperature is reached. Models are fitted with digital room temperature (C°) display, spare parts storage compartment and heavy duty solid wheels. Proven pump systems handle either paraffin, kerosene or diesel with no adjustment of air compressor required. All models are fitted with fuel tank gauge and heavy-duty filler cap.

Sealey Advantages

- PARAFFIN, KEROSENE OR DIESEL - The Sealey AB heaters will operate on all.
- CLEAN BURNING - A specially designed burner head in a stainless steel combustion chamber ensures a more thorough burn of fuel which means greater fuel economy and maximum heating effect.
- FILTER PROTECTION - The compressor unit is protected by extra large filter elements.
- LARGE FUEL TANK - The AB series heaters will operate for between 8 and 11 hours on a single fill of fuel.
- SAFETY FEATURES - The AB series heaters are fitted with a flame-out device which cuts the fuel supply when the flame is inadvertently extinguished.
- QUALITY - Manufactured to comply with the rigorous standards.
- AFTER SALES SERVICE - The best after sales service in the business. Full spares back up for all models.


3. SPECIFICATION

Model no	AB1008	AB1258	AB1758
Output	29.3kW/ 100,000Btu/hr	36.6kW/ 125,000Btu/hr	51.3kW/ 175,000Btu/hr
Tank capacity	38ltr	38ltr	49ltr
Fuel	Paraffin/Kerosene/ Diesel	Paraffin/Kerosene/ Diesel	Paraffin/Kerosene/ Diesel
Supply	230V - 5A	230V - 5A	230V - 5A
Running time per filling (maximum)	11hr	10hr	9.5hr
Transport wheels	Yes	Yes	Yes
Airflow	520cfm	540cfm	630cfm
Automatic shut off	Yes	Yes	Yes
Heated area	20,000ft³/566mtr³	24,800ft³/702mtr³	34,400ft³/974mtr³

Contents	
1	Wheel Support Frame
1	Axle
2	Wheels
1	Front Handle
1	Rear Handle
2	Cord Wraps
2	Axle Bushings
4	Cord Wrap Screws
8	Frame Bolts
8	Frame Nuts


4. ASSEMBLY

- 4.1. Slide axle through wheel support frame, slide a bushing and flat washer (A) to each end of the axle.
- 4.2. Install wheels with valve stem on the outside, slide flat washer (B) onto the axle and then using a cotter pin bend the legs of the pin with pliers to secure. Snap on the wheel caps onto the flat washer (B).
- 4.3. Place heater on wheel support frame ensuring that the air inlet is by the wheels and place the heater onto the frame lining up the holes on the fuel tank flange with holes on the wheel support frame.
- 4.4. Place handle on fuel tank flange and line up with the wheel support frame fixing holes. Insert bolts through the fuel tank flange and both frames and secure finger tight only with nuts and washers.
- 4.5. Repeat with process with the rear handle.
- 4.6. Attach the cord wraps using screws and nuts.
- 4.7. When assembly is complete, securely tighten all nuts.
 - **WARNING! DO NOT** use the heater without the support frame fully assembled.

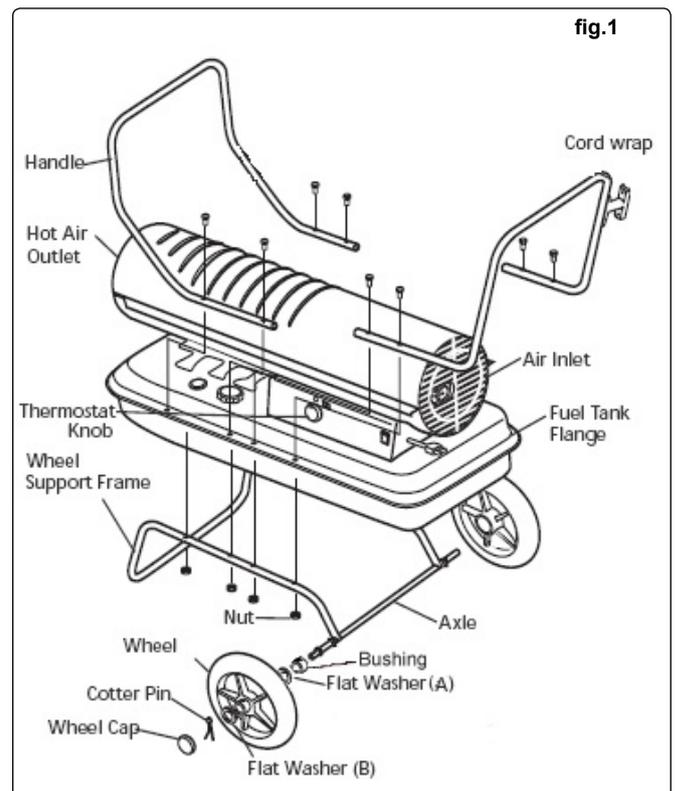

5. OPERATING CONDITIONS

When the heater is switched on the air compressor draws in air, pressurises it and passes it through an air line to the burner head nozzle. The air flow causes fuel to be drawn from the tank. The fuel and air mix is then sprayed into the combustion chamber. The mixture is automatically ignited by the spark plug and a high temperature heat stream is generated in the combustion chamber. Air is drawn into the unit by a fan and is pushed around the cool chamber situated between combustion chamber and outer casing. This fast flowing air sucks the heat stream out of the combustion chamber, providing the required heat. The heat output is governed by the compressor - the higher the air pressure the hotter the flame. If the system malfunctions a "flame-out" control will operate and automatically cut off the motor and fuel supply. Should this happen, switch off machine and unplug from mains supply. Refer to trouble shooting chart in Section 8 and/or return unit to supplier for maintenance.

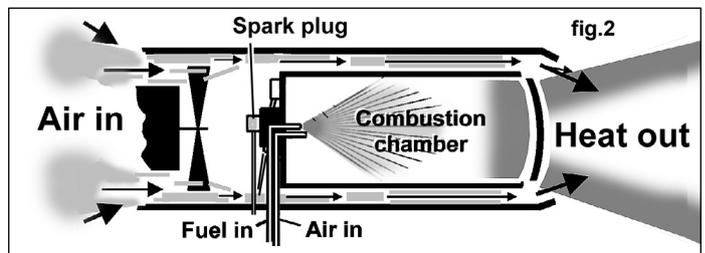

5.1. FUEL

- ❑ **WARNING! This heater is not suitable for use with Bio-Diesel; use of Bio-Diesel will damage the filter and seals. Damage caused by use of Bio-Diesel will not be covered by warranty.**

The AB series will operate with three types of fuel, paraffin, kerosene or diesel. The following information must be understood before use.

- 5.1.1. Paraffin / Kerosene will sometimes cause condensation. If the unit is stored unused (i.e. during the summer) such condensation will cause the fuel tank to corrode and, when next used, the flame to pulsate due to water in the tank. To overcome the problem, the fuel must be drained off, if the heater is to be unused for long periods.

- 5.2. When used in the construction or agricultural industries ensure that the safety regulations in force are adhered to with regard to distances from flammable materials and any other specified substances.

- ❑ **WARNING! Air contaminants taken into the heater may affect the heat output, damage the unit and may cause health problems.**

Example: Bodyshop filler dust or paint overspray will damage the motor bearing, clog the filter and compressor and contaminate the combustion chamber causing flame flutter and health hazards.

Please note that any parts damaged by filler dust or overspray will not be covered by warranty.

- 5.3. **VENTILATION. Minimum recommended opening for fresh air intake, AB1008 = 0.29m², AB1258 = 0.37m², AB1758 = 0.52m².**

- ❑ **WARNING!** Only use the heater in well ventilated areas. Careful consideration must be given to the placing of the heater to provide safe and comfortable heating. Ensure continuous ventilation is provided to the heater operating area, allow at least 0.01m²/kW heater output. A ventilation opening must run to the outside of the premises in which the heater is to be operated.

Minimum clearance from combustibles	
Top	1.2m
Sides	1.2m
Front	2.4m

6. OPERATION

6.1. RUNNING THE HEATER ON PARAFFIN/KEROSENE

The heater has been pre-set at the factory to a setting which is suitable for paraffin, kerosene or diesel and will produce the correct heat output when first used from new. You should run the heater at the pre-set output in order to ensure the long life, safety and reliability of the unit.

- ❑ **WARNING!** The first time the heater is used, fire up outdoors and run for at least 10 minutes to burn off any oils used in the manufacturing process.

- 6.1.1. Ensure that the unit is unplugged from the mains supply.

- 6.1.2. Fill the fuel tank (fig.5) with paraffin, kerosene or diesel until the fuel gauge points to "F".

- × **DO NOT** mix the fuels, always drain and clean out the fuel tank when changing type of fuel.

- ❑ **WARNING!** Never refill the fuel tank indoors, always refill outside. **DO NOT** overfill. Wipe away any spillage before use.

- 6.1.3. Plug into the main power supply using the 2m extension cable.

- 6.1.4. Turn the thermostat control knob (fig.4) to the desired temperature setting. The heater has a range from 4°C to 43°C. Press the power switch to the "ON" (I) position. The lamp and the room temperature display will illuminate and the heater will start.

NOTE: The electrical components of this heater are protected by a fuse mounted on the PCB. If the heater fails to fire, check this fuse first and replace if necessary. Also check the power source to ensure that the proper voltage is being provided to the heater.

NOTE: The room temperature display will indicate the following:

If the temperature is less than 0°C, the display will show "LO".

If the temperature is above 37°C, the display will show "HI"

Actual temperatures will be shown between 4°C and 37°C.

- 6.1.5. The pump pressure should be +/- 10% of the pressure stated in the specification table above, if the unit is running outside of this tolerance, adjust the pressure as shown in fig.3.

- 6.1.6. Shut down the heater using the ON/OFF switch and then disconnect from the mains supply.

6.2. RESTARTING THE HEATER.

- 6.2.1. Wait 10 seconds after turning the heater "OFF" (O).

- 6.2.2. Turn the Power switch to "ON" (I).

- ❑ **WARNING!** Ensure that all pre-starting precautions are carried out.

6.3. MONITORING THE HEAT OUTPUT

- 6.3.1. If, after a period of time, the heat output begins to fall this indicates that either the unit requires maintenance, as laid out in Section 7, or that the environmental conditions the unit is operating in are not correct, see Section 5.

fig.3 Pump Pressure Adjustment

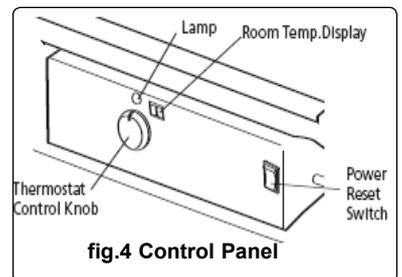
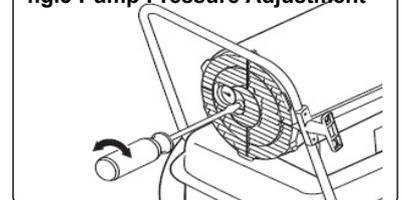


fig.4 Control Panel

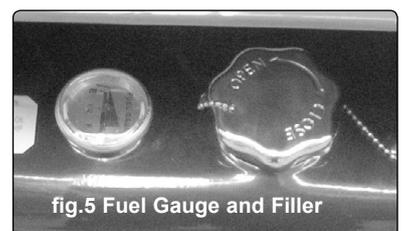


fig.5 Fuel Gauge and Filler

- * **DO NOT ATTEMPT TO TURN UP THE AIR PRESSURE TO COMPENSATE FOR HEAT LOSS** as this could result in damage to the combustion chamber and will invalidate the warranty.

7. MAINTENANCE



WARNING! MAINTENANCE MUST ONLY BE UNDERTAKEN BY A QUALIFIED PERSON. WE STRONGLY RECOMMEND THAT ALL SERVICING IS DONE BY YOUR LOCAL SERVICE AGENT.

Looking after your AB heater will pay dividends, ensuring heat when you need it and avoiding frustrating operational problems.

IMPORTANT! We strongly recommend that you arrange for heater servicing during the summer months to avoid being left without heat during the winter.

- **WARNING! Unplug unit from mains power supply before opening or servicing heater.** See Section 1 regarding electrical safety and maintenance.

7.1. GENERAL

- 7.1.1. Keep the heater clean; wipe outer case with a damp, clean cloth. **DO NOT** use abrasives.
- 7.1.2. Oil wheels if necessary. Check heater for damage and immediately repair or replace with authorised parts. Contact your Sealey Service Agent.

7.2. FUEL TANK

- 7.2.1. For long term storage the fuel tank will need to be drained. The tank should be flushed every 200 hours of operation or as required. Using a small amount of fresh paraffin, rinse and swirl the paraffin inside the tank and then drain fully.

7.3. SPARK PLUG (electrode).

- 7.3.1. Clean and check the plug gap every 600 hours, or replace if necessary. Clean the spark plug using a wire brush and set the gap to 3.5mm (fig.6).

7.4. AIR FILTER

- 7.4.1. The cast alloy compressor unit is protected by a three stage filter system (fig.7). The intake filter should be cleaned every 500 hours or more regularly if the appliance is used in a dusty environment.
- 7.4.2. Remove fan guard and the filter end cover.
- 7.4.3. Take out the intake filter, wash it using a light detergent and dry thoroughly.
- 7.4.4. The Output and Lint filters should be replaced every 500 hours or less if the operating conditions demand.

7.5. FUEL FILTER

- 7.5.1. The fuel filter (fig.8) should be cleaned twice per season, unless contamination occurs where it will require cleaning immediately. To clean the filter, remove and wash in paraffin.

7.6. NOZZLE

- 7.6.1. The nozzle should be cleaned or replaced at least once per heating season.
- 7.6.2. To clean dirt from nozzle, Unscrew the four retaining screws and hinge open the top cover of the heater.
- 7.6.3. Remove the burner head and remove the nozzle (fig.9).
- 7.6.4. Blow compressed air through the front of the nozzle. For stubborn dirt it is advisable to soak the nozzle in clean paraffin to help loosen any particulate.
- 7.6.5. Refit nozzle and burner head in reverse order to above.

7.7. FLAME OUT DEVICE

- 7.7.1. The AB heaters are fitted with a flame-out device (a photocell, see fig.10), which cuts the fuel supply should the flame be inadvertently extinguished, or if the unit overheats. If this happens, switch off the heater and unplug from the mains supply. Check the heater to determine the fault. In particular check that the air intake is not obstructed and that the internal fan is rotating freely. Wait a few minutes and restart the unit. If the problem persists contact your local Sealey Stockist.

- 7.8. **FAN BLADES** (fig.11) should be cleaned at least once per heating season (depending on environment). Remove the outer case and clean the fan blades with a damp cloth. Dry fan thoroughly using compressed air.

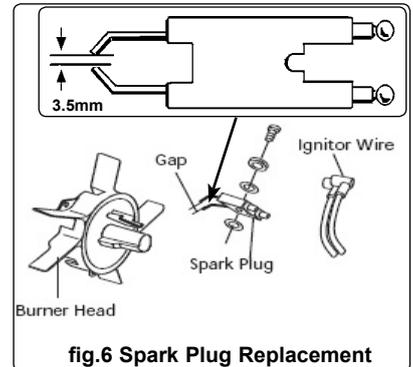


fig.6 Spark Plug Replacement

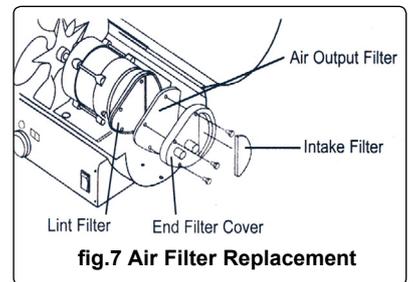


fig.7 Air Filter Replacement

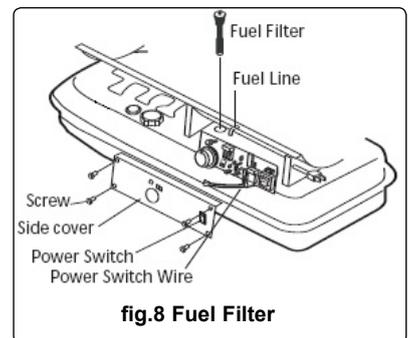


fig.8 Fuel Filter

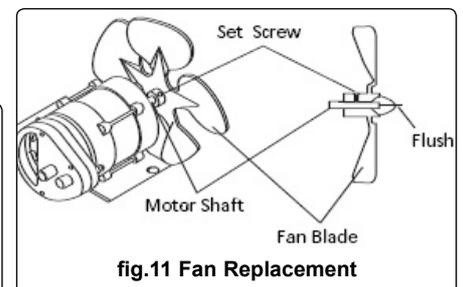


fig.11 Fan Replacement

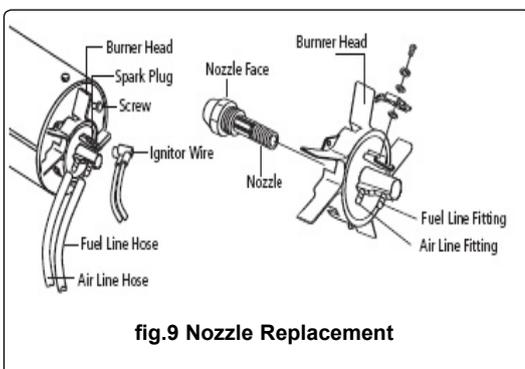


fig.9 Nozzle Replacement

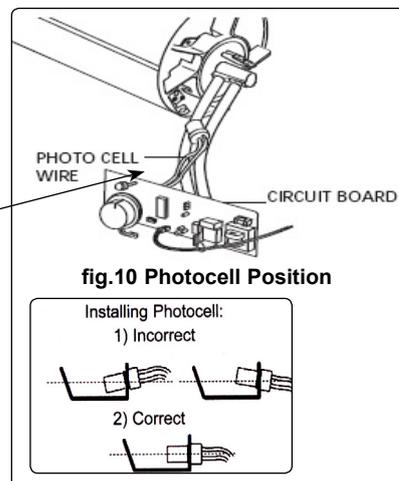


fig.10 Photocell Position


7.9. FUSE REPLACEMENT

NOTE: This is a fuse protected heater.

- 7.9.1. If your heater fails to ignite check the fuse as shown in fig.12 before contacting your local service agent.

- **WARNING! Unplug the heater from the mains power supply before attempting any maintenance work.**

- 7.9.2. Remove the control panel screws and lift off the side panel to reveal the printed circuit board.
- 7.9.3. Disconnect switch wires from the power switch.
- 7.9.4. Remove fuse from holder as shown.
- 7.9.5. Replace fuse with one of the same specification.
 - ❑ **WARNING! DO NOT** substitute the fuse with one of a higher or lower current rating as this may result in a fire hazard.
- 7.9.6. Reconnect switch wires to the power switch.
- 7.9.7. Replace side panel.

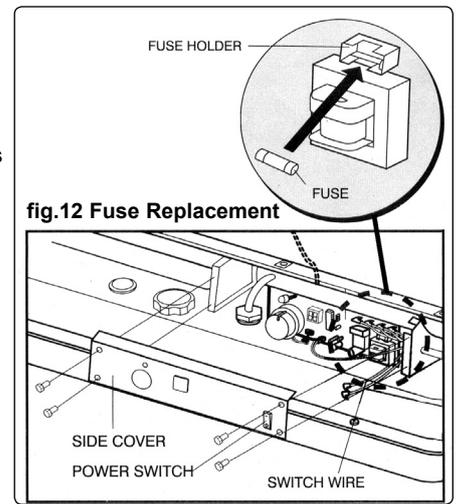


8. TROUBLESHOOTING

- 8.1. Although our heaters operate with diesel fuel, when the temperature is below 0°C diesel additives are required to maintain the diesel's viscosity. Typically diesel can cloud in freezing conditions and will start to gel. You will need additives for your fuel in these conditions. Kerosene/Paraffin does not start to gel until the ambient temperature is around -40°C.

Problem	Possible Cause	Solution
Heater fires, but main PCB shuts heater off after a short period of time. Lamp is flickering and LED display shows "E1".	<ol style="list-style-type: none"> 1. Incorrect pump pressure. 2. Dirty input, output or lint filter. 3. Dirty Fuel Filter. 4. Nozzle is dirty. 5. Photocell lens is dirty. 6. Photocell not installed properly. 7. Photocell Defective. 8. Improper electrical connection between Main PCB and Photocell. 9. Ambient temperature to low for fuel type, 	<ol style="list-style-type: none"> 1. Adjust pump pressure (see fig.3). 2. Clean/replace Air Filter. 3. Clean/replace Fuel Filter. 4. Clean/replace Nozzle. 5. Clean/replace Photocell. 6. Adjust Photocell position. 7. Replace Photocell. 8. Check wiring connections. 9. Change fuel type.
Heater will not operate or motor runs for a short time. Lamp flickers and LED display shows "E1".	<ol style="list-style-type: none"> 1. No paraffin in fuel tank. 2. Incorrect pump pressure. 3. Corroded Spark Plug or incorrect gap. 4. Dirty Fuel Filter. 5. Dirty Nozzle. 6. Moisture in Fuel/Fuel Tank. 7. Faulty electrical connection. 8. Ignitor Wire not connected to Spark Plug. 9. Defective Ignitor. 	<ol style="list-style-type: none"> 1. Fill tank with fresh paraffin. 2. Adjust pump pressure (see fig.3). 3. Clean/adjust/replace spark plug. 4. Clean/replace Fuel Filter. 5. Clean/replace Nozzle. 6. Rinse out fuel tank with fresh paraffin. 7. Inspect all electrical connections. 8. Re-attach Ignitor Wire to Spark Plug. 9. Replace Ignitor.
Fan does not operate when heater is plugged in and Power Switch is in the "ON" position. The lamp is flickering or on and LED display shows "E1" or "E2".	<ol style="list-style-type: none"> 1. Thermostat is set too low. 2. Broken electrical connection between Main PCB and motor. 	<ol style="list-style-type: none"> 1. Rotate Thermostat to a higher setting. 2. Inspect all electrical connections.
Lamp flickering and LED display shows "E3".	<ol style="list-style-type: none"> 1. Thermostat Switch has failed. 	<ol style="list-style-type: none"> 1. Replace Thermostat Switch.
Poor Combustion.	<ol style="list-style-type: none"> 1. Flames extending beyond heater. 2. Low heat output. 	<ol style="list-style-type: none"> 1. Decrease Pump Pressure (see fig.3). 2. Increase Pump Pressure (see fig.3).
Heater does not turn on and the lamp is not lit.	<ol style="list-style-type: none"> 1. Temperature limit sensor has overheated. 2. No electrical power. 3. Fuse Blown on PCB. 4. Faulty connection between Temperature Limit Sensor and PCB. 	<ol style="list-style-type: none"> 1. Push Power Switch to "OFF" and allow heater to cool for 10 minutes. Push Power Switch back "ON". 2. Check power cable and extension cable connections. Test power supply. 3. Check/replace Fuse (see fig.12). 4. Inspect all electrical connections.

9. FUEL TYPE

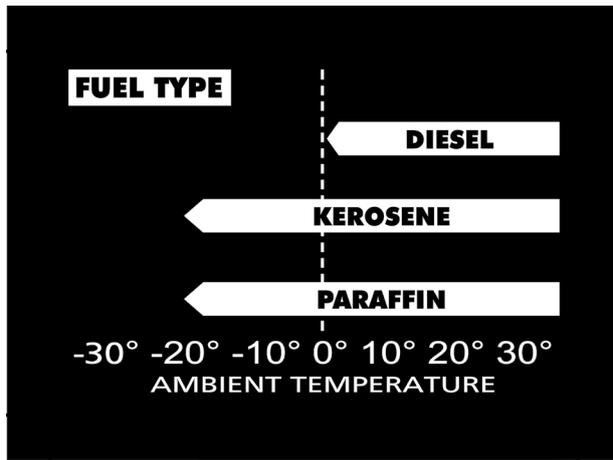

ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk



Information requirements for gaseous/liquid fuel local space heaters

Model identifier(s): AB1008.V3										
Indirect heating functionality: Yes No <input checked="" type="checkbox"/>										
Direct heat output: 29.3 (kW)				Indirect heat output: N/A (kW)						
Fuel						Space heating emissions NO _x nitrogen oxides				
Select fuel type:	Gaseous	Liquid <input checked="" type="checkbox"/>	Specify: Diesel			95.87 [mg/kWh _{input}] (GCV)				
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit			
Heat output				Useful efficiency (NCV)						
Nominal heat output	P_{nom}	28.1	kW	Useful efficiency at nominal heat output	$\eta_{th,nom}$	92.3	%			
Minimum heat output (indicative)*	P_{min}	N/A	kW	Useful efficiency at minimum heat output (indicative)*	$\eta_{th,min}$	N/A	%			
Auxiliary electricity consumption				Type of heat output/room temperature control (select one)						
At nominal heat output	$e_{l,max}$	0.255	kW	Single stage heat output, no room temperature control	Yes	No <input checked="" type="checkbox"/>				
At minimum heat output	$e_{l,min}$	N/A	kW	Two or more manual stages, no room temperature control	Yes	No <input checked="" type="checkbox"/>				
In standby mode	$e_{l,SB}$	N/A	kW	With mechanical thermostat room temperature control	Yes <input checked="" type="checkbox"/>	No				
* Enter figure or NA				With electronic room temperature control	Yes	No <input checked="" type="checkbox"/>				
				With electronic room temperature control plus day timer	Yes	No <input checked="" type="checkbox"/>				
				With electronic room temperature control plus week timer	Yes	No <input checked="" type="checkbox"/>				
				Other control options (multiple selections possible)						
				Room temperature control, with presence detection	Yes	No <input checked="" type="checkbox"/>				
				Room temperature control, with open window detection	Yes	No <input checked="" type="checkbox"/>				
				With distance control option	Yes	No <input checked="" type="checkbox"/>				
With adaptive start control	Yes	No <input checked="" type="checkbox"/>								
Permanent pilot flame power requirement				With working time limitation	Yes	No <input checked="" type="checkbox"/>				
Pilot flame power required (if applicable)*	P_{pilot}	N/A	kW	With black bulb sensor	Yes	No <input checked="" type="checkbox"/>				
The seasonal space heating energy efficiency η_s										
Item	Symbol	Value	Unit							
The seasonal space heating Energy efficiency in active mode	$\eta_{s,on}$	100	%							
The seasonal space heating energy efficiency η_s	η_s	92.3	%							
Energy efficiency classes				A						
Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. www.sealey.co.uk										
v1				ERP Table 1						



Information requirements for gaseous/liquid fuel local space heaters

Model identifier(s): AB1258.V3										
Indirect heating functionality: Yes No <input checked="" type="checkbox"/>										
Direct heat output: 36.6 (kW)				Indirect heat output: N/A (kW)						
Fuel						Space heating emissions NO _x nitrogen oxides				
Select fuel type:	Gaseous	Liquid <input checked="" type="checkbox"/>	Specify: Diesel			95.87 [mg/kWh _{input}] (GCV)				
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit			
Heat output				Useful efficiency (NCV)						
Nominal heat output	P_{nom}	35.4	kW	Useful efficiency at nominal heat output	$\eta_{th,nom}$	92.3	%			
Minimum heat output (indicative)*	P_{min}	N/A	kW	Useful efficiency at minimum heat output (indicative)*	$\eta_{th,min}$	N/A	%			
Auxiliary electricity consumption				Type of heat output/room temperature control (select one)						
At nominal heat output	$e_{l,max}$	0.255	kW	Single stage heat output, no room temperature control	Yes	No <input checked="" type="checkbox"/>				
At minimum heat output	$e_{l,min}$	N/A	kW	Two or more manual stages, no room temperature control	Yes	No <input checked="" type="checkbox"/>				
In standby mode	$e_{l,SB}$	N/A	kW	With mechanical thermostat room temperature control	Yes <input checked="" type="checkbox"/>	No				
* Enter figure or NA				With electronic room temperature control	Yes	No <input checked="" type="checkbox"/>				
				With electronic room temperature control plus day timer	Yes	No <input checked="" type="checkbox"/>				
				With electronic room temperature control plus week timer	Yes	No <input checked="" type="checkbox"/>				
				Other control options (multiple selections possible)						
				Room temperature control, with presence detection	Yes	No <input checked="" type="checkbox"/>				
				Room temperature control, with open window detection	Yes	No <input checked="" type="checkbox"/>				
				With distance control option	Yes	No <input checked="" type="checkbox"/>				
				With adaptive start control	Yes	No <input checked="" type="checkbox"/>				
Permanent pilot flame power requirement				With working time limitation	Yes	No <input checked="" type="checkbox"/>				
Pilot flame power required (if applicable)*	P_{pilot}	N/A	kW	With black bulb sensor	Yes	No <input checked="" type="checkbox"/>				
The seasonal space heating energy efficiency η_s										
Item				Symbol		Value		Unit		
The seasonal space heating Energy efficiency in active mode				$\eta_{s,on}$		100		%		
The seasonal space heating energy efficiency η_s				η_s		92.3		%		
Energy efficiency classes				A						
Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. www.sealey.co.uk										
v1						ERP Table 1				