



INSTRUCTIONS FOR:
BLIND BEARING PULLER SET - 5PC
 MODEL NO: **AK714.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

  **IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to the instruction manual



Wear eye protection

1. SAFETY

- WARNING!** Ensure that Health and Safety, local authority and general workshop practice regulations are adhered to when using this product.
- × **DO NOT** use this product if damaged.
- ✓ Maintain product in good and clean condition for best and safest performance.
- ✓ If the vehicle to be worked on is raised, ensure that it is adequately supported with axle stands or ramps and chocks.
- ✓ Wear approved eye protection. A full range of personal safety equipment is available from your Sealey dealer.
- ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear loose jewellery and tie back long hair.
- ✓ Account for all tools and parts being used.
- ✓ If working off the vehicle, secure the work piece in a vice or clamp it to a work bench.
- × **DO NOT** operate puller if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- IMPORTANT:** Always refer to the vehicle manufacturer's service instructions, or a proprietary manual, to establish the current procedure and data. These instructions are provided as a guide only.

2. INTRODUCTION

2.1. Introduction


Fully chromed carbon steel medium stroke slide hammer. 380mm Overall length with 0.9kg hammer. Bearing extractor collets with internal capacity from 12 to 32mm. Supplied in carry-case.

3. SPECIFICATION

Model No: **AK714.V3**
 Collet Sizes Ø:..... 12-16.5mm
 16.5-18mm
 18-24.5mm
 24.5-32mm


4. CONTENTS

- 24.5mm - 32mm Attachment (Part No: AK714.V3-01)
- 18mm - 24.5mm Attachment (Part No: AK714.V3-02)
- Slide hammer (Part No: AK714.V3-03)
- 16.5mm - 18mm Attachment (Part No: AK714.V3-04)
- 12mm - 16.5mm Attachment (Part No: AK714.V3-05)

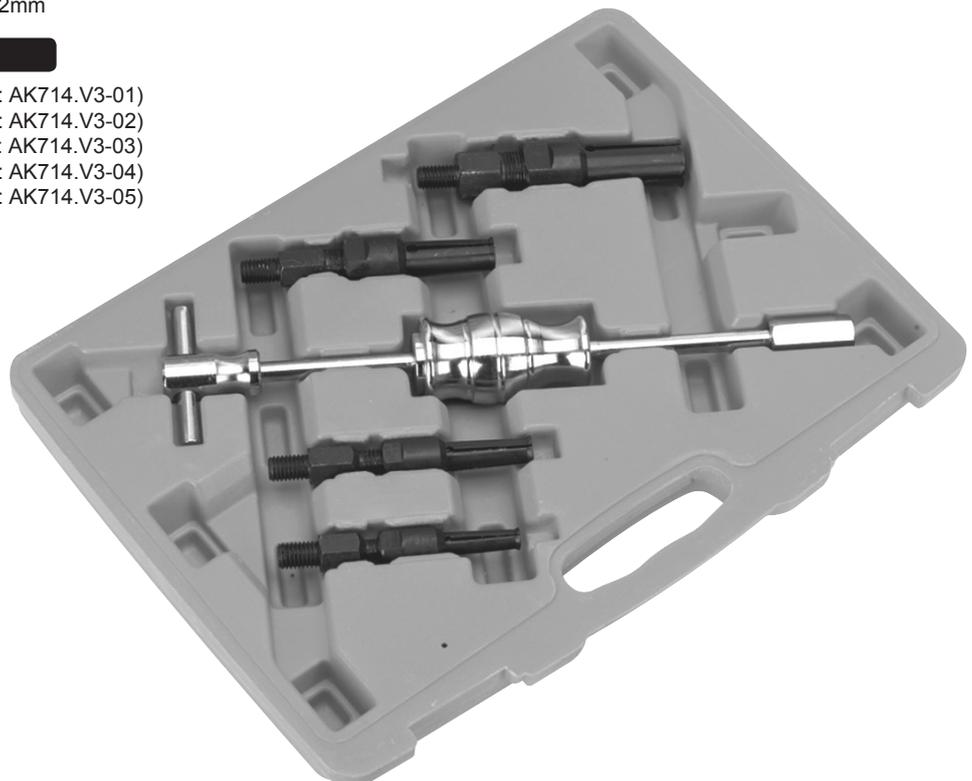


5. OPERATION


5.1. Prior to use of the required attachment, disassemble and grease as shown in fig.1. Reassemble the attachment.

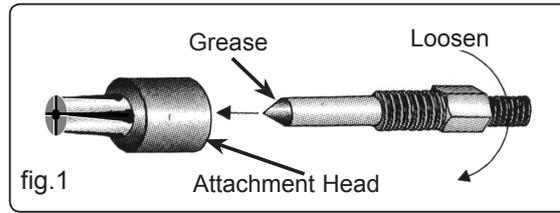

5.2. Screw the attachment into the shaft, as shown in fig.2. Tighten the attachment using a wrench. **Note: DO NOT** over tighten.

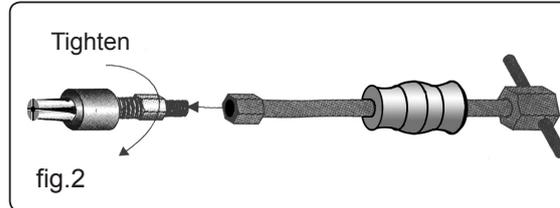


5.3. Ensure the attachment jaws are completely closed and insert the attachment into the inner diameter of the bearing, fig.3.

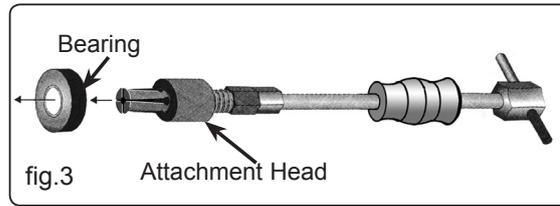


5.4. Turn the handle clockwise to open the attachment jaws to grip the bearing. See fig.4.

5.5. Hold the bearing puller as shown in fig.5, slide the hammer to the bearing end of the shaft and then forcefully pull the hammer to the other end of the shaft.

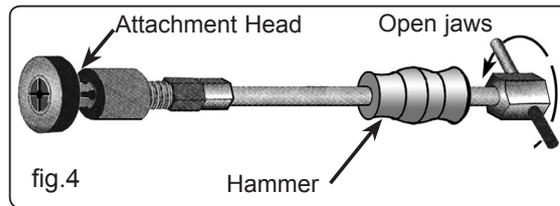

5.6. Ensure the bearing is being pulled out evenly, if not, remove the puller attachment and, using a soft faced mallet, tap the bearing until it is seated evenly.

5.7. Repeat paragraphs 5.5 and 5.6 until the bearing has been removed.

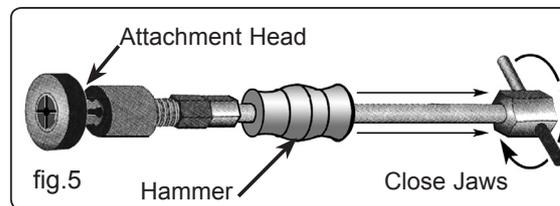

5.8. Turn the handle anticlockwise to close the jaws in order to release the bearing from the attachment head. See fig.5.

6. MAINTENANCE

6.1. After use, account for all components, clean with a lightly oiled cloth and return them to the carry case.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, dispose of the product according to local regulations.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

☎ 01284 757500

☎ 01284 703534



www.sealey.co.uk



sales@sealey.co.uk