



10PC BRIDGE BEARING PULLER SET

MODEL NO: **AK7160**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves

1. SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this tool.
- WARNING!** Familiarise yourself with the specific applications and limitations of the kit, as well as any potential hazards.
- This kit should be used in conjunction with inspection maintenance procedures recommended in the vehicle manufacturer's manual.
- Ensure that the kit is correct for the task.
- Wear the appropriate personal protective equipment for the task. A full range is available from your Sealey stockist.
- DO NOT** use the kit for any purpose other than that for which it is designed.
- Ensure that the vehicle is properly supported with axle stands before working under the vehicle.
- Ensure there is adequate lighting prior to using the kit. A range of inspection lamps are available from your Sealey stockist.
- Keep children and unauthorised persons away from the working area.
- DO NOT** use the kit if any parts are damaged or missing, as this may cause failure and/or personal injury.
- DO NOT** use the kit when you are tired, or under the influence of alcohol, drugs or intoxicating medication.
- After use, store in a safe, dry childproof area.

2. INTRODUCTION

Screw-type bridge extractor set. The thin tapered lips on the collets secure a positive grip on the curved surface of the internal bearing bore. Gently removes blind bearings where the use of a slide hammer may damage the surrounding material. Bearing extractor collets with internal capacity from 8 to 27mm.


3. SPECIFICATION

Model No:.....**AK7160**

Collet Diameter:....Ø8-9.4, 9.5-11.4, 11.5-13.4, 13.5-16.4, 16.5-18.4, 18.5-24, 24.5-27mm



4. CONTENTS

Refer to attached Parts List

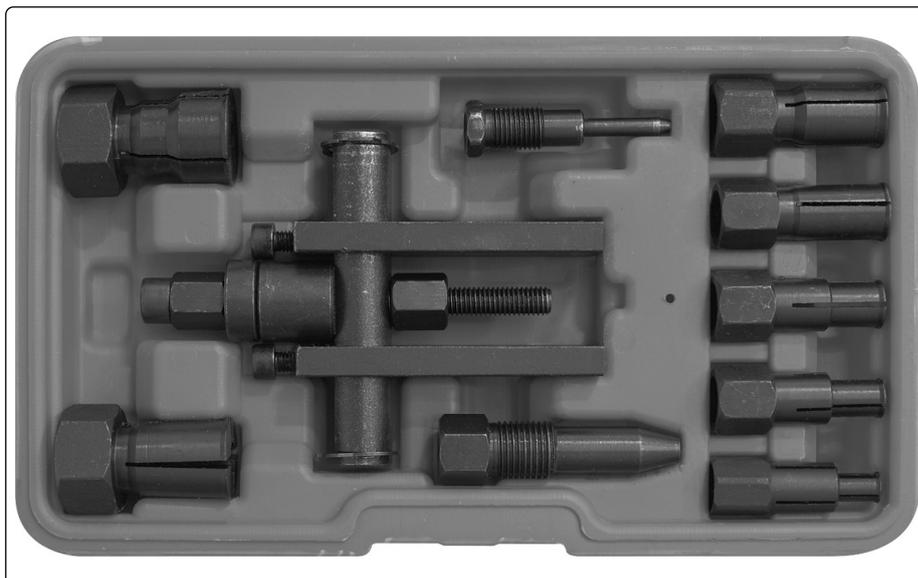

5. OPERATION

- 5.1. Before using the required attachment disassemble and grease as shown in fig.1. Collet to be fully inserted into the bearing before attempting to pull the bearing.
- 5.2. Insert the attachment into the bearing.
- 5.3. Hold the attachment with a spanner and wind the drive pin into the attachment, with another spanner, until the jaws open and grip the bearing, fig.2.
- 5.4. Place the bridge extractor legs in the correct position over the bearing housing, tighten the cap head screws on the legs to hold them in position, fig.3.
- 5.5. Screw the bridge extractor's hex screw into the attachment. Hold the attachment with a spanner and tighten.
- 5.6. Hold the long cap head screw still and wind the bearing out using the nut beneath, fig.3.

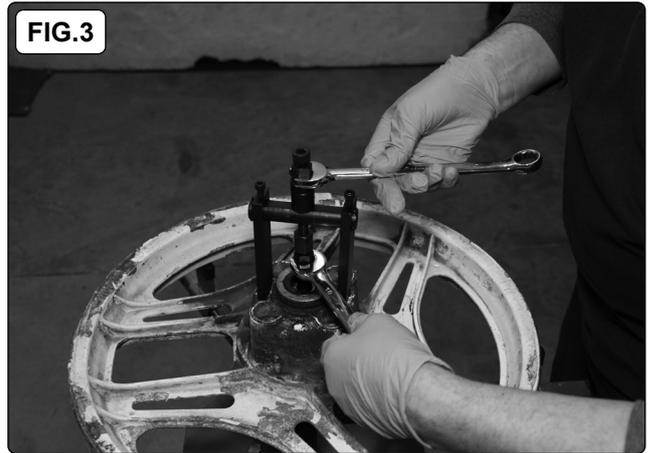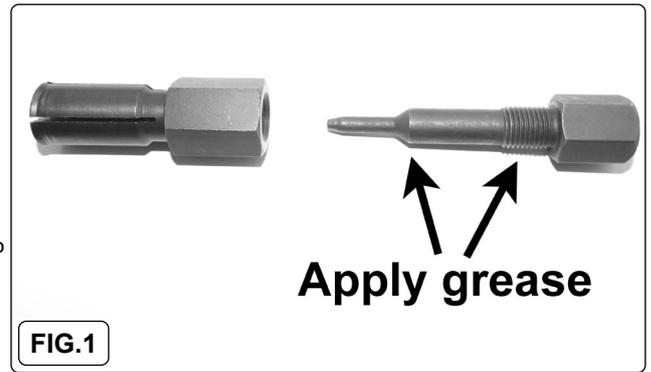

ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk