SEALEY

WORKSHOP BICYCLE STAND

MODEL NO: BS102

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

1. SAFETY

- ✓ Maintain the stand in good condition, Replace or repair damaged parts. Use recommended parts only. Non authorised parts may be
- √ dangerous and will invalidate the warranty.
- ✓ Before use ensure that all stand nuts and bolts are tight and that moveable and clamping parts are in good working order.
- Place stand on a sound level surface offering adequate working clearance for its function. Keep area clean, tidy and free from unrelated materials. Ensure there is adequate lighting.
- ✓ When mounted ensure the bicycle centre of gravity is between the stand legs.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain long hair.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- **DO NOT** use the stand for any purpose other than for which it is designed.
- DO NOT get the stand wet or use in damp or wet locations or areas where there is condensation.
- ✓ When not in use store the stand in a safe, dry, child proof area.
- DO NOT exceed maximum load of 30kg.

2. INTRODUCTION

Manufactured with steel tubes with rubber coated frame clamp which helps prevent damage to paintwork. Features large rubber feet for added stability and multi-position tool tray to ensure tools are always close to hand. Adjustable work height from 1050mm to 1750mm.

3. SPECIFICATION


Model no	BS102
Max. height	1750mm
Min. height	1050mm
Max. load	30kg
Min. cycle frame size	25mm
Max. cycle frame size	40mm
Frame tube diameter	inner pipe:Ø35x1.5mm
	outer pipe:Ø38x1.2mmGS


4. ASSEMBLY

- **4.1.** Assemble base inserting 2 radial legs and sliding rear leg through base mounting and clamping it at its mid-point (fig.1.A and fig.2). Secure by tightening the hex bolts with the 5mm hex key supplied.
- **4.2.** Ensure that the base is placed on a solid, level surface. Fit rubber feet and ensure that they all have their flat surface downwards.
- 4.3. Insert the upright tube (fig.1.B) in base and secure.
- **4.4.** Clamp mounting head (fig.1.G.) onto sliding tube (fig.1.C.)
- 4.5. Fix holding clamp (fig.1.G.) to short tube (fig.1.F. and fig.4). Slide tube into mounting head and tighten locking screw.
- 4.6. Attach the tool tray (fig.1.E) to the upright tube and set to a convenient height. The tool tray contains a magnet to retain tools and parts.





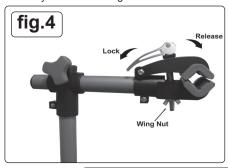

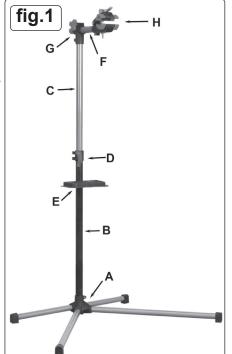

USING THE STAND

- 5.1. Ensure that all hex bolts are tight before using the stand.
 - × DO NOT exceed the maximum extension of the cycle mounting tubes (fig.1 C & F). There is a mark on each tube to show this limit.
- 5.2. Only use the stand with cycle suspended over the legs.
- 5.3. Select a point on the cycle frame which will allow it to be clamped in a balanced position to avoid straining the clamps or tipping the stand.
- 5.4. Adjust the angles of the clamps (fig.4) before installing cycle.
- The pressure exerted by the clamp may be adjusted by tightening or loosening the wing nut underneath. (fig.4) 5.5.
- 5.6. If any adjustment is required with the cycle in situ, it is recommended that 2 people are used.
 - × **DO NOT** nip any cables or wires in the clamp to avoid damage.
 - DO NOT over tighten clamp on carbon fibre or thin aluminium frames; the clamp can exert considerable force.

Parts support is available for this product. Please email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 sales@sealey.co.uk www.sealey.co.uk