



LEAF BLOWER CORDLESS 20V - BODY ONLY

MODEL NO: **CB20V**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Warning



Wear safety footwear



Wear protective clothing



Keep in dry area protect from rain

1. SAFETY

- ✓ Always wear appropriate eye protection, ear protection, substantial footwear, gloves, long trousers whilst operating.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain long hair.
- ✓ Inspect and ensure equipment is in good working order before use.
- ✓ Maintain and clean tool and battery pack, regularly. Check air holes are clear.
- ✓ Must be serviced by an authorised agent. Use genuine parts only. Non authorised parts will invalidate the warranty.
- ☐ **WARNING!** Remove battery before: performing maintenance, carrying out adjustments, inspecting the machine after striking an object, before clearing a blockage, before leaving the tool unattended, before moving to the next job location.
- ✓ **WARNING!** Risk assess the work area. Keep bystanders away from the work area. **DO NOT** operate with anyone or pets nearby. Check intended work area for wildlife.
- * **DO NOT** use in bad weather conditions, especially when there is a risk of lightning. **DO NOT** expose to rain. Only use in good light.
- * **DO NOT** use if tool vibrates abnormally, switch off, remove battery and then inspect.
- * **DO NOT** touch hazardous moving parts. Allow to come to a complete stop first.
- * **DO NOT** operate whilst tired, ill under the influence of alcohol or other intoxicating drugs.
- * **DO NOT** overreach and keep balance at all times.
- * **DO NOT** use if damaged. **DO NOT** operate with damaged or missing air tube.
- * **DO NOT** use for a task it was not designed to perform.
- ✓ Store with the battery removed and separate from the machine, in a dry, childproof location.
- ☐ **WARNING!** Never allow **children**, persons with reduced physical sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine, local regulations may restrict the age of the operator.

2. INTRODUCTION


Lightweight, cordless and extremely powerful garden leaf blower makes gardening easy, clean and effective. Can be used for DIY and professional use. Ideal for removing leaves and waste from driveways, patios and small gardens. Works in conjunction with our one battery fits all program. Body only. Powered by a 2Ah or 4Ah battery and mains charger available.

3. SPECIFICATION

Model No: CB20V
 Batteries:
 Model No. CP20VBP2 Power Tool Battery 20V 2Ah Lithium-ion for CP20V Series
 Model No. CP20VBP4 Power Tool Battery 20V 4Ah Lithium-ion for CP20V Series
 Charger: CP20VMC - Battery Charger 20V Lithium-ion for CP20V Series
 Voltage: 20V Li-ion
 Maximum Air Speed: 130mph
 Maximum Air Volume: 150m³/hr
 Nett Weight: 1.25kg

4. OPERATION

- 4.1. When operating, always hold the machine approximately 3cm above the ground.
 - ▲ **DANGER! DO NOT** blow hot, flammable or explosive material
- 4.2. Connect the blower tubes to the main unit, and secure with the screw provided.
- 4.3. Insert the battery.
- 4.4. Switch on using switch on handle.

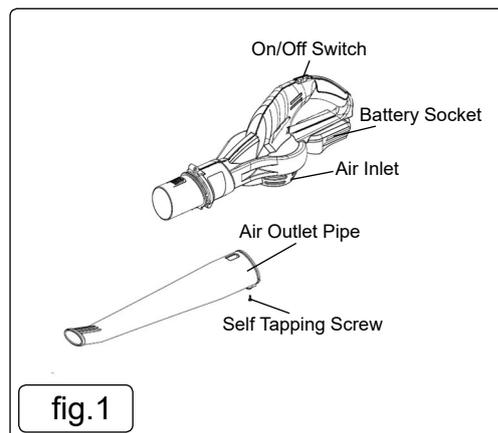

5. MAINTENANCE

- **WARNING!** Remove battery before attempting any maintenance
- 5.1. Keep all nuts, bolts and screws tight to be sure that the machine is in safe working condition.
- 5.2. Examine the machine and replace worn or damaged parts for safety. Ensure replacement parts fitted are genuine.
- 5.3. Before any work on the garden product itself (e.g. Maintenance, tool change, etc.) as well as during transport and storage, remove the battery from the garden product.
- 5.4. There is danger of injury when unintentionally actuating the On/Off switch.
- 5.5. For safe and proper working, always keep the garden product and the ventilation slots clean.
- 5.6. Never spray with or immerse the garden product in water.
- 5.7. Store the garden product in a secure, dry place, out of the reach of children.
- 5.8. **DO NOT** place other objects on the blower.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk