

baridi

Baridi 28 Bottle Wine Cooler, Fridge, Touch Screen Controls, LED Light, Black



Model No. DH10.V2

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instructions



Indoor use
only



Warning:
flammable
material

ELECTRICAL SAFETY

- ❑ **WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- **Electrical safety information.** It is important that the following information is read and understood:
 - Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
 - Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
 - If the cable or plug is damaged during use, switch off the electricity supply and remove from use. **Ensure that repairs are carried out by a qualified electrician.**
- **GENERAL SAFETY**
 - **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
 - **DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - **DO NOT** damage the refrigerant circuit.
 - **DO NOT** use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
 - **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
 - **WARNING: DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
 - This appliance is intended to be used in household and similar applications such as:
 - - Staff kitchen areas in shops, offices and other working environments.
 - - Farm houses and by clients in hotels, motels and other residential type environments.
 - - Bed and breakfast type environments.
 - - Catering and similar non-retail applications.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
 - To avoid contamination of drink, please respect the following instructions:
 - - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - - Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
 - - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **INTRODUCTION**
 - Sleek and compact design with tempered mirror glass door to reflect **UV** light and help protect your wine. Temperature range between 5-18°C controlled by touch screen controls. (Recommended ambient temperature up to 25°C). Features soft white **LED** light. Waved metal shelves with space for up to 28 bottles of wine. Accommodates a maximum bottle height of 330mm. Compressor cooling technology with automatic defrost feature to make this unit as easy as possible to use. Energy Efficiency Class G.

• SPECIFICATION

- Model no: **DH10**: Capacity: 28 bottles Max. bottle height: 330mm Temperature range: 5-18°C Rated current: 0.6A Voltage: 220-240V
- Frequency: 50Hz Energy efficiency class: G Noise level: 39dB Dimensions (W x D x H): 430 x 450 x 840mm Volume 77L.

• INSTALLATION

- The unit is designed to be free-standing. Ventilation Space - a minimum space of 50mm is required for the rear of the fridge and 30mm for the top and both sides. This will maximise the efficiency, performance and the life of the fridge and also ensure that there is sufficient space for the hinge to operate effectively.
- Locate the unit away from direct sunlight or sources of heat i.e. radiator, stove etc. Extreme or cold ambient temperatures may also prevent the unit working effectively.
- **DO NOT** locate the unit in a damp or moist location.
- Ensure that the floor surface is strong and stable enough to support the unit when it is fully loaded.
- Level the unit when in location by using the adjustable levelling feet in each corner.
- Once in position allow the unit to rest for an hour before turning it on.
- Allow the unit 2-3 hours to reach set temperature after switching on before placing any items in the compartment.

• OPERATION



- To turn the unit on, press the  symbol. The unit's control panel will automatically lock out after 20 seconds of non-use.
- To unlock the control panel hold the  symbol for approximately 2 seconds when an audible noise will be emitted to signify an active state.
- To turn on internal light press  symbol. The light will turn off after 10 minutes.
- To change the temperature units displayed, press and hold the  symbol for approximately 2 seconds.
- To set the required operating temperature use the  symbol to increase it, and the  symbol to decrease it. Each press will cause a 1° change in the set value.
- During use, service and disposal the appliance, please pay attention to warning symbol similar as on right, which is located on rear of appliance (rear panel or compressor) and yellow or orange in colour.
- There are flammable materials in refrigerant pipes and compressor.
- Please site away fire sources during use, service and disposal.


• TIPS

- Intended to be used exclusively for the storage of wine.
- This refrigerating appliance is not suitable for the freezing foodstuffs.
- The wine cooler is designed to run at 12°C.
- Shelves placed in factory mode (see diagram alongside) is the most efficient use of energy for the refrigerating appliances.
- The following combination of shelves is recommended for energy to be used as efficiently as possible by the refrigeration unit.
- There are 6 shelves and 1 display shelf.
- When the surrounding temperature is 25°C and the wine cooler has no bottles loaded, it will take around 30 minutes to increase the wine cooler's temperature from 5°C to 12°C. Under the same circumstances, it will take around one hour to decrease the wine cooler's temperature from 12°C to 5°C. The less the temperature span is, the less time it will take.
- The wine cooler is recommended to be designed at 12°C. The energy consumption is 0.397kWh/24h. If the setting temperature is higher than 12°C, the energy consumption will be lower. If the setting temperature is lower than 12°C, the energy consumption will be higher.
- When the compressor works for 12 hours, the compressor will stop and defrost for 40 minutes.



• MAINTENANCE

- Remove the power plug from the supply when performing cleaning or maintenance.
- **DO NOT** use abrasive or chemical cleaning materials on any surface of the unit.
- Wipe interior and exterior surfaces with a damp cloth and dry thoroughly with a clean dry cloth.
- For more soiled surfaces use a neutral detergent, wipe down with a clean damp cloth and dry thoroughly with a clean dry cloth.

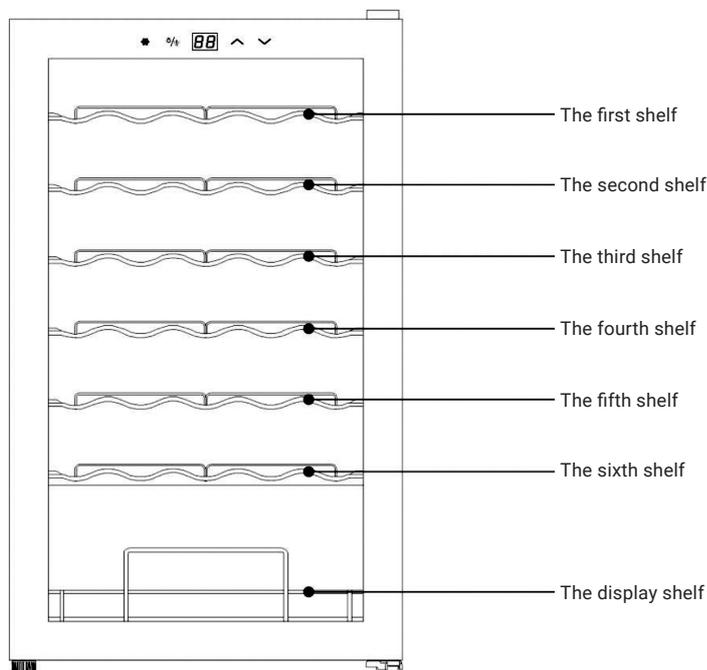

Troubleshooting

Symptom	Solution
Unit does not operate.	Not plugged in. Fuse/circuit breaker failure.
Turns on and off frequently. Poor cooling.	Room temperature higher than normal. Door opened too often. Door not properly closed. Temperature control incorrectly set. Door gasket not sealing. Not enough space around unit.
Vibrations	Check unit is level.
Noisy unit	Contraction/expansion of panels. Unit not level. Check fan operation. Check heat pump.
Door will not close properly	Unit not level. Gasket distorted. Internals out of position.

Environment Protection and Waste Protection and Electrical Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. Under the Waste Batteries and Accumulators Regulations 2009, Dellonda would like to inform the user that this product contains one or more batteries. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Dellonda Limited

Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

 01284 757575  support@dellonda.co.uk  www.dellonda.co.uk