


baridi

Baridi 50L Tabletop 3-10°C Beer & Drinks Mini Fridge with Light - Black & Glass

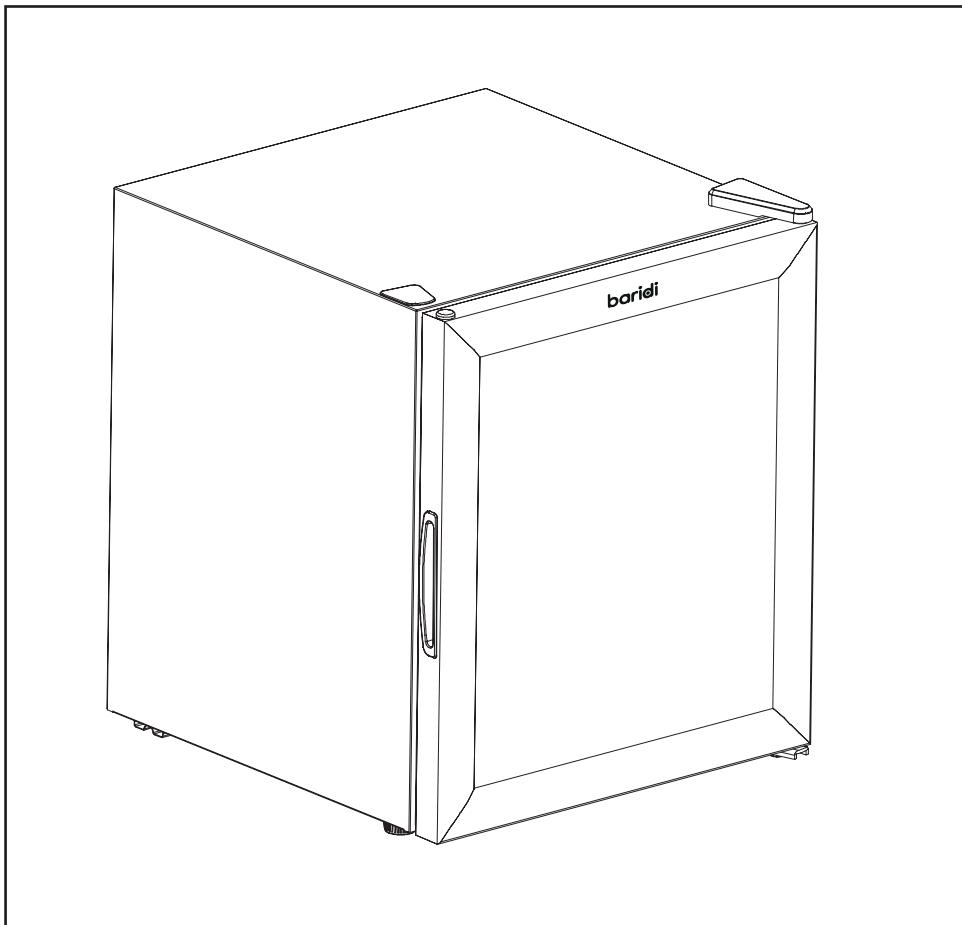

Model No. DH12.V3

Thank you for purchasing a Baridi product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instruction
manual



Warning:
flammable
material

SAFETY INSTRUCTIONS

ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using.
- Inspect power supply leads, plugs and all electrical connections for wear and damage.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Baridi qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Baridi recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- Important: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.

GENERAL SAFETY

- Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- Children shall **NOT** play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- This refrigeration appliance is intended to be used at ambient temperature ranging from 16°C to 32°C.
- **NOTE:** This appliance contains flammable refrigerant R600a and foaming agent cyclopentane.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
 - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING! DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- The appliance shall not be exposed to rain.
- **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING! DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING! DO NOT** damage the refrigerant circuit.
- **WARNING! DO NOT** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Please avoid contact fire when you transport and use it.
- Professional repair only.

SPECIFICATION



- Capacity: 46L
- Climate Class: N
- Electrical Class I
- Energy Efficiency Class: D
- Energy Rating: D
- Foaming Gas: Cyclopentane
- Frequency: 50Hz
- Internal/External Dimensions: 36 x 38.6 x 41.6cm/ 51 x 46.5 x 56cm
- Weight: 18kg
- Power Cable Length: 1.9m
- Rated Current: 0.6a (20g)
- Temperature Range: 3-10°C
- Voltage: 220-240V
- Volume: 48L

INSTALLATION

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the levelling feet at the bottom of the appliance.
- Allow 10 cm of space between the top, the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the appliance in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord.
- After plugging the appliance into a wall outlet, allow the appliance to cool down for 2-3 hours before placing any items in the compartment.

PARTS AND FEATURES

- 1: Upper Hinge
- 2: Door Gasket
- 3: Shelf
- 4: Door Handle
- 5: Adjust Foot
- 6: Bottom Hinge

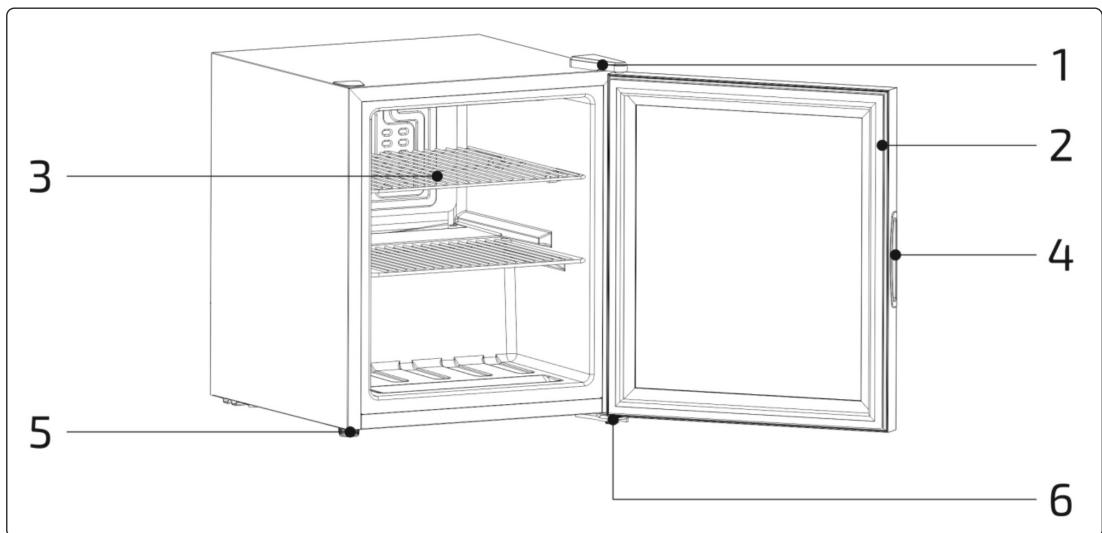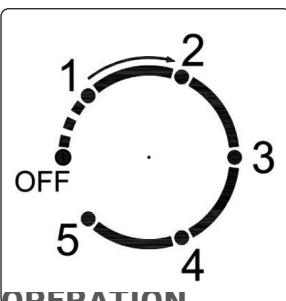

OPERATION


• SETTING THE TEMPERATURE CONTROL

- The temperature control knob is used to adjust the temperature in the refrigerator.
- The number on the knob does not represent the temperature value. At the same ambient temperature, the larger the number, the lower the temperature in the refrigerator; the smaller the number, the higher the temperature in the refrigerator.
- Users can adjust the temperature control knob according to their needs.
- If the ambient temperature is high, it is not recommended to set the temperature control knob to "5", otherwise the compressor will continue to run.
- Before the refrigerator is powered off, please set the gear to "0".
- When the temperature control knob is set to "0", the compressor will stop working, but the power supply of the refrigerator will not be cut off.

• HINTS FOR USE

- It is intended to be used exclusively for the pantry.
- This refrigerating appliance is not suitable for the freezing of foodstuffs.
- The recommended ambient temperature is 17°C.
- The shelves placed in factory's orientation mode is the most efficient use of energy for the refrigerator.
- The following combination of shelves is recommended for energy to be used as efficiently as possible by the refrigeration unit.

THERE ARE TWO SHELVES IN TOTAL

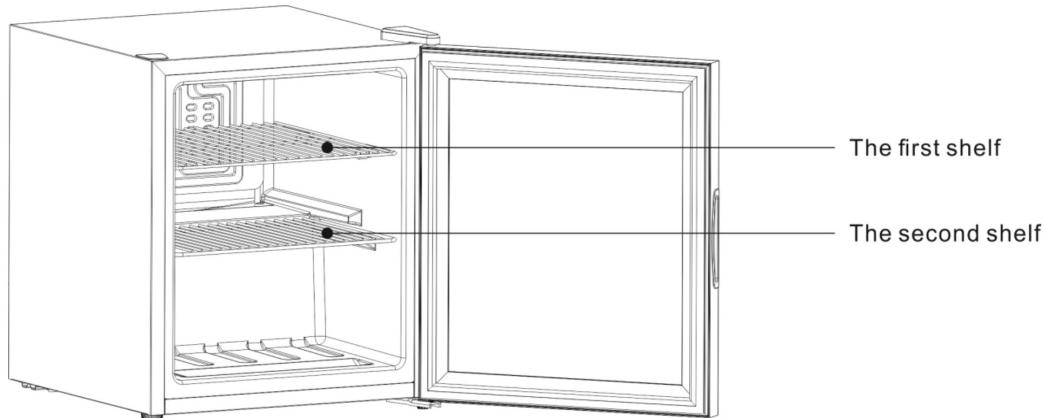

- The ambient temperature is designed to be 17°C. The energy consumption is 0.164 kWh/24h. If the setting temperature is higher than 17°C, the energy consumption will be lower. If the setting temperature is lower than 17°C, the energy consumption will be higher.

MAINTENANCE

- **WARNING!** Disconnect from mains supply before performing maintenance or cleaning.
- **DEFROSTING**
 - Ice may build up on the evaporator if the unit is put to work constantly for a period of time.
 - When ice begins to build up to approx 10 mm or 1/5 inch thick, defrost is required.
 - Empty the cabinet of the products that must stay cold. Switch the control knob to the 'OFF' position.
 - The ice will start to melt. When the ice has melted and drained away, dry off any residual moisture with a soft cloth.
 - Switch on the power again. Adjust control knob.

Please note it will take around 12 hours for the fridge and contents to get back down to temperature.

CLEANING

- **UNPLUG** your fridge and remove any stock to a suitable back-up fridge.
- Wash the inner compartment with warm water and neutral detergent. **DO NOT** allow the control panel, cables or plug to get wet. **NEVER** use corrosive detergents, wire brushes, or abrasive scourers to clean your chiller.
- **NEVER** use metal or sharp implements to remove debris.
- Dry all surfaces thoroughly.
- Use mild soapy water to clean the gasket and seals.

STORAGE

- Store upright in a dry, child free place, out of direct sunlight.

TRANSPORT

- Follow directions on carton. **DO NOT** clamp on the front or sides.

TROUBLESHOOTING

- **Refrigerator does not work:**
 - Is mains supply connected?
- **Refrigerator is noisy:**
 - Is the surface beneath it level? Is it stable (adjust feet).
 - Is it in contact with external objects or walls? (Move position).
- **Internal temperature is not low:**
 - Improper setting temperature, select the appropriate temperature.
 - The door is not closed tightly or opened frequently, and the opening time is too long.
 - Is the location exposed to direct sunlight or too close to the a heating source or other heat sources?
 - Poor heat dissipation, please check whether there is enough cooling space around the product.

END OF LIFE

- Recycle according to regulations in force.

Environment Protection and Waste Protection and Electrical Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Dellonda, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Dellonda, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757575 • Email: support@dellonda.co.uk • Web: www.dellonda.co.uk