



FOLD DOWN TELESCOPIC TRESTLE 200KG CAPACITY

MODEL NO: **FDT3.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves



Wear safety footwear

1. SAFETY

- ✓ Familiarise yourself with this products application and limitations, as well as the specific potential hazards attributed to the trestle.
- ✓ Maintain the trestle in good condition.
- ✓ Replace or repair damaged parts. Use recommended parts only. Non authorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the trestle clean for best and safest performance.
- ✓ Locate the trestle in a suitable working area for its function, keep area clean, tidy, free from unrelated materials and ensure there is adequate lighting.
- ✓ Ensure the workpiece is correctly secured on the trestle/trestles before commencing work activity.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip steel toe-capped shoes/boots.
- ✓ Keep children and unauthorised persons away from the working area.
- ✗ **DO NOT** use the trestle for any purpose other than that for which it is designed.
- ✗ **DO NOT** make any modifications to the trestle.
- ✗ **DO NOT** operate the trestle if any parts are missing or if the "over centre" locking links are not in the correct positions.
- ✗ **DO NOT** exceed the rated capacity of the trestle.
- ✗ **DO NOT** stand on the trestle or use as a platform.
- ✓ When not in use, stand or store in a safe, dry location.
- ☐ **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.


2. INTRODUCTION

Manufactured from square section steel tube the trestle is ideal for supporting large/long workpieces when cutting, drilling etc. Trestle beam has seven-position height adjustment and includes pivoted end stops to retain the workpiece. Legs fold in for easy transportation and storage.

3. SPECIFICATION

Model No:FDT3.V2
 Beam Width: 690mm
 Capacity:..... 200kg
 Folded (W x D x H): 680 x 150 x 840mm
 Height Adjustment:..... 800-1300mm
 Unfolded (W x D x H): 680 x 580 x 800mm
 Nett Weight: 6kg

4. CONTENTS

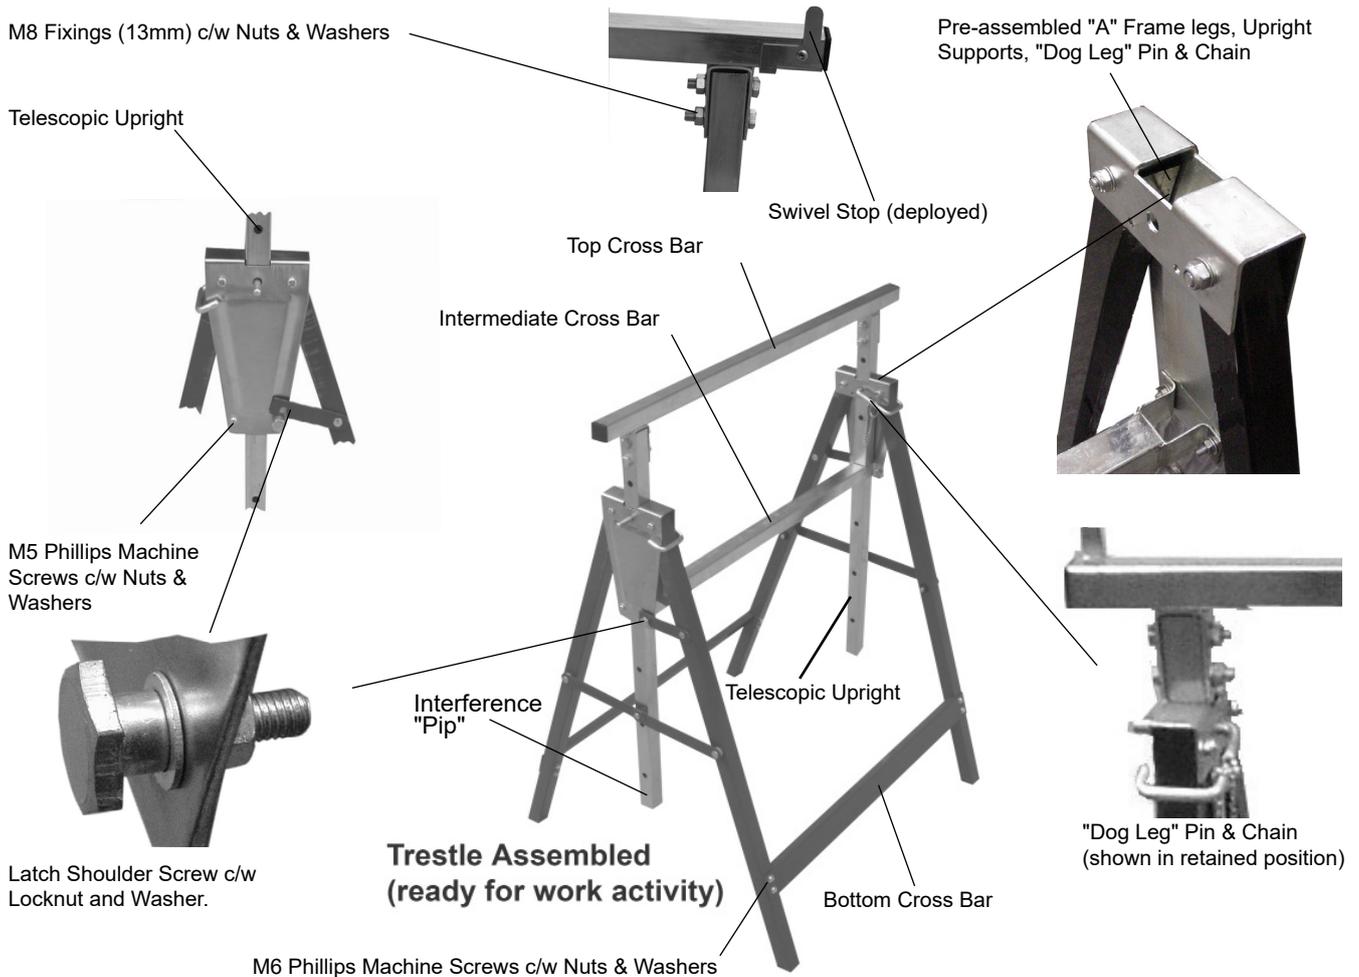

Description	Qty
"A" Frame Sub Assembly	2
Bottom Cross Bar	2
Intermediate Cross Bar	1
Top Cross Bar Fabrication	1
Telescopic Uprights	2
M8 Fixings c/w Nuts & Washers	8-sets
M6 Phillips Machine Screws c/w Nuts & Washers	8-sets
Latch Shoulder Screw c/w M5 Nuts & Washers	2-sets
M5 Phillips Machine Screws c/w Nuts & Washers	2-sets

Check contents from list. In the unlikely event of a missing component please contact your Sealey stockist.

5. ASSEMBLY

5.1. TOOLS REQUIRED:

5.1.1. 13mm spanner, 10mm spanner, 8mm spanner and Phillips screwdrivers for M6 & M5.

5.2. ASSEMBLY

5.2.1. Fit intermediate cross bar to pre-assembled "A" frames (NB! Diagonally opposed latch positions). **DO NOT** fully tighten fixings.



5.2.2. Fit bottom cross bars to "A" frames. **DO NOT** fully tighten fixings.

5.2.3. From diagrams, firstly latch (Fig 1) and then "over centre" lock (Fig 2) "A" frame both sides. Tighten all screws.

5.2.4. Sub assemble telescopic uprights to top cross bar (M8 fixings). Fit with interference "Pips" outermost and **DO NOT** fully tighten fixings.

5.2.5. Lower sub assembled telescopic uprights into "A" frames and intermediate cross bar guides. This will require a small force as the interference "Pips" pass through the guides.

5.2.6. Insert "dog legged" pin through any of the holes in the telescopic uprights. Rotate pin to the "safe" retained position. Tighten top cross bar fixings. With "A" frames latched and locked both sides, height set, the trestle is ready for use.

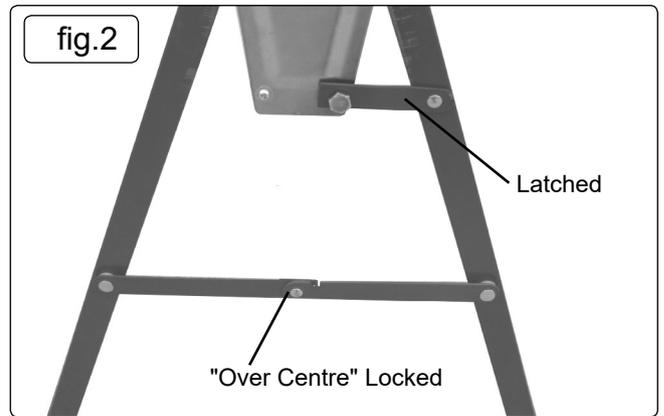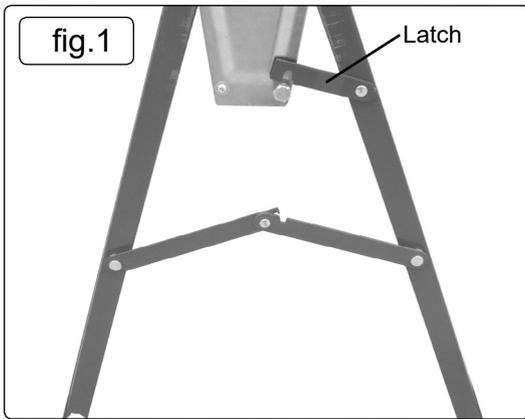

Parts support is available for this product. To obtain parts, email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk