



15L ASH VACUUM CLEANER 1000W/230V

MODEL NO: PC150A

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.




Refer to instructions

1. SAFETY

1.1. ELECTRICAL SAFETY

- ❑ **WARNING!** It is the user's responsibility to check the following:
 - Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey Stockist.
 - If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.
 - Electrical safety information, it is important that the following information is read and understood.
- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
 - * **DO NOT** pull or carry the appliance by the power cable.
 - * **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
 - * **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.
 - If the cable or plug is damaged during use, switch the electricity supply and remove from use.
 - Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.
 - Class II products are wired with live (brown) and neutral (blue) only, and are marked with the  Class II symbol;
 - A) Connect the BROWN live wire to the live terminal 'L'.
 - B) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.
 - Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
 - * **DO NOT** connect either wire to the earth terminal.
 - Sealey recommend that repairs are carried out by a qualified electrician.

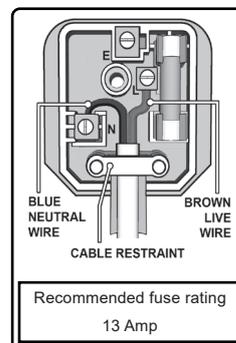

1.2. GENERAL SAFETY

- ❑ **WARNING!** This cleaner is for dry use only
- ✓ Disconnect the cleaner from the power supply before servicing, changing accessories, or performing any maintenance.
- ✓ Use only genuine parts and accessories. Unauthorised parts and accessories may be dangerous and will invalidate your warranty.
- ✓ Maintain the cleaner in good condition. Use authorised agent for servicing.
- * **DO NOT** operate the unit without both filters in place. Using the cleaner without a filter will result in motor failure and will invalidate your warranty.
- * **DO NOT** allow children or untrained persons to operate the cleaner.
- * **DO NOT** place attachments close to your face. **DO NOT** point the hose end at other persons or animals.
- ▲ **DANGER! DO NOT** vacuum hot or glowing ash, cigarette ends, inflammable, explosive, corrosive or other dangerous substances.
- * **DO NOT** use to vacuum soot.
- * **DO NOT** use for vacuuming materials with a temperature above 40°C.
- * **DO NOT** leave machine running unattended. Turn power supply OFF, and **DO NOT** leave the vicinity until motor has come to a complete stop.
- * **DO NOT** operate the cleaner while under the influence of drugs, alcohol or impairing medication, or if you are tired.
- * **DO NOT** use the cleaner in the rain or in very damp conditions.
- * **DO NOT** use the cleaner for a task it is not designed to perform.
- ✓ When not in use, store the cleaner in a safe, dry, childproof location.

2. INTRODUCTION

Ideal for the collection of ash or fire debris from fireplaces, stoves, wood burners, BBQs, grills and more. A powerful 1000W motor provides great suction performance. With a 15L capacity, the lightweight tank features quick release clips for ease of emptying. A 1m flexible metal lined suction hose allows the suction of ash up to a temperature of 40°C (100°F). Supplied with Model No. PC150ACF HEPA Cartridge Filter, Model No. PC150ACLF Cloth Filter, crevice tool and extension tube.

3. SPECIFICATION

Model No:.....PC150A
Airflow:.....102m³/hr
Consumable Parts: PC150ACF - Cartridge Filter, PC150ACLF - Cloth Filter
Drum Size: 15L
Filter Type: Cartridge, Cloth
Maximum Vacuum Pressure: 185mbar
Motor Power:.....1000W
Supply:.....230V
Vacuum Accessories Diameter:..... Ø38mm



KEY:

- 1: Tank
- 2: Cover
- 3: Cloth Filter
- 4: HEPA Cartridge Filter
- 5: Suction Hose
- 6: Extension Tube
- 7: Crevice Tool

4. OPERATION

- 4.1. The cleaner must have both the cloth filter (fig.1.3) and HEPA cartridge filter (fig.1.4) fitted before use. Fit as in figs.2 and 3.



fig.2

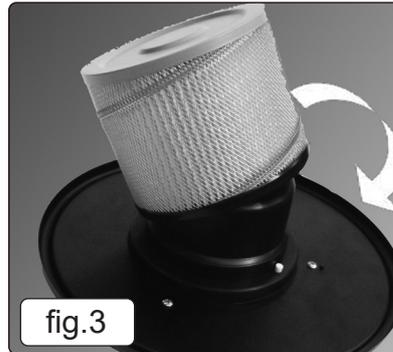


fig.3

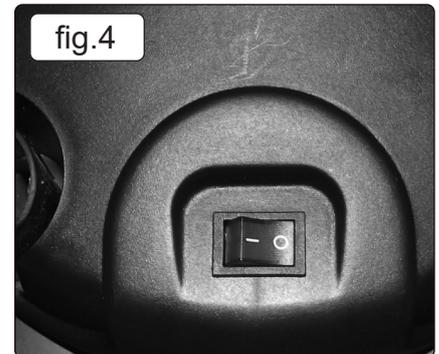


fig.4

- 4.2. Connect the suction tube (fig.1.5) to the drum (fig.1.1) and the extension tube (fig.1.6) to the hose. If required, fit the crevice tool (fig.1.7) to the extension tube.
- 4.3. Connect the cleaner to the electrical mains. Start the cleaner by pressing the on/off switch (fig.4).
- 4.4. To empty the tank: unclip the securing clips to remove the cover. Remove the cloth filter and empty the tank.

5. MAINTENANCE

Before carrying out any maintenance or cleaning, isolate the unit from electrical power

5.1. CLOTH FILTER CLEANING

- 5.1.1. The cloth filter may be cleaned, when necessary, by removing from the tank and washing in warm water.
- 5.1.2. Allow the filter to dry at room temperature for 24 hours before replacing in the machine.

5.2. HEPA CARTRIDGE FILTER CLEANING

- 5.2.1. The HEPA cartridge filter should be cleaned when a reduction of suction is noticed.
- 5.2.2. To clean the cartridge, remove from the top cover by pulling gently (fig.3).
- 5.2.3. For routine cleaning, use a soft bristle brush (not supplied) to remove deposits from the outside of the filter.

NOTE: avoid breathing in airborne dust.

- 5.2.4. The cartridge filter can be washed: run water through the filter from the inside to loosen deposits.
- 5.2.5. When wet cleaned, leave at room temperature for at least 24 hours, or until dry to the touch.
- 5.2.6. When dry, push over the top cover (fig.3) until locked firmly in place.

5.3. CLEANING

- 5.3.1. Clean with a damp cloth, **DO NOT** use abrasive or solvent cleaners.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk