



100L WET & DRY VACUUM CLEANER 3000W 19KPA STAINLESS STEEL DRUM ACCESSORIES

MODEL NO: **PC4100**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions
manual



Wear protective
clothing



Wear protective
gloves



Wear ear
protection

1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
 - ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
 - ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
 - ✗ **DO NOT** use worn or damaged cables, plugs or connectors.
 - ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
 - ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
 - ✓ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - ✓ The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
 - ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.

1.2. GENERAL SAFETY

- ✓ Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- ✓ Children shall NOT play with the appliance.
- ✓ Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- ✓ Disconnect the cleaner from the power supply before servicing, changing accessories, or performing any maintenance.
- ✓ Use only genuine parts and accessories. Unauthorised parts and accessories may be dangerous and will invalidate your warranty.
- ✓ Maintain the cleaner in good condition. Use an authorised agent for servicing. Keep machine clean, but **DO NOT** use solvents.
- ✗ **DO NOT** operate the unit without a filter in place as this will cause machine faults and will invalidate your warranty.
- ✓ Use only the paper cartridge filter specified for dry vacuuming. Use only the cloth filter specified for wet vacuuming.
- ✓ Wear protective clothing and gloves.
- ✗ **DO NOT** allow children or untrained persons to operate the cleaner.
- ✗ **DO NOT** place attachments close to your face (especially eyes, ears).
- ✗ **DO NOT** point the hose end at other persons or animals.
- ▲ **DANGER! DO NOT** vacuum very fine powders (e.g. calcareous/gesso/graphite as they will block ventilation and damage motor), hot or glowing ash, inflammable, explosive, corrosive or other dangerous substances.
- ✗ **DO NOT**
 - ✗ **DO NOT** leave the machine running unattended, turn power supply OFF.
 - ✗ **DO NOT** leave the vicinity until motor has come to a complete stop.
 - ✗ **DO NOT** operate the cleaner when you are tired or under the influence of alcohol, drugs or intoxicating medication.
 - ✗ **DO NOT** use the cleaner in the rain or in very damp conditions.
 - ✗ **DO NOT** use the cleaner for a task it is not designed to perform.
 - ✗ **DO NOT** tilt or drop the cleaner.
 - ✗ **DO NOT** place the cleaner close to a heat source.
- ✓ When not in use, store the cleaner in a safe, dry, childproof location, away from sunlight and high temperatures.

1.3. OPERATIONAL SAFETY

- WARNING!** If water comes out of the outlet do not invert the machine whilst repairing, in case water goes into the motor causing damage.
 - ✗ **DO NOT** use as a pump as it will damage the motor.
 - ✗ **DO NOT** use undue force on the hose.
 - ✗ **DO NOT** immerse the motor head section of the vacuum in water.
 - ✓ Use care when using on stairs to prevent vacuum falling.

2. INTRODUCTION

Fitted with a high-performance 3000W motor delivering up to 19kPa of suction power. 100L stainless steel drum provides extended cleaning time with fewer emptying intervals. Suitable for both wet and dry vacuuming tasks in industrial and workshop environments. Durable stainless steel construction with a reinforced base for added stability. Heavy-duty base fitted with two fixed wheels and two swivel castors for smooth movement. Hose fitted for easy and efficient emptying of contents. Supplied with a 5m hose and 4m power cable for greater working range. Includes dry floor nozzle, wet floor nozzle, cloth filter, 2x aluminium tubes, crevice tool, brush nozzle, and 100L cloth dust bag.

3. SPECIFICATION

Model No: PC4100
Drum Size: 100L
Electrical Class: II
Filter Type: Cloth
Fuse Rating: 13A
Maximum Vacuum Pressure: 19kPa
Motor Power: 3000W
Eight: 26kg
Plug Type: 3-Pin BS
Power Supply Cable Length: 4m
Vacuum Accessories Diameter: 38mm

4. CONTENTS



5. OPERATION

- 5.1. Release clips on body, accessories are stored inside the body of the vacuum. **NOTE:** Vacuum motor head assembly is heavy . **DO NOT** allow it to fall over and get damaged whilst removed from the vacuum body.
- 5.2. Connect outlet hose into body (push and turn).
- 5.3. Connect desired accessory after assembly of two part extension tube.
- 5.4. **DRY OPERATION:** Ensure dry operation cloth filter is fitted.
- 5.5. **WET OPERATION:** Remove cloth filter for wet operation.
- 5.5.1. **DRUM FULL PROTECTION DEVICE:** When the tank is full of water, suction will stop. The motor will sound as if it is running at very high speed.
Disconnect from mains supply.
Empty the water from the tank. Remove bung from end of tank drain hose and lower hose to empty.
- 5.6. **SELECT MOTOR SPEED:**
- 5.6.1. Each of the 3 buttons on the motor head controls a motor. Select one, two or three as required.

6. MAINTENANCE

- ❑ **WARNING!** Disconnect from mains supply before Maintenance is carried out.
- 6.1. Clean exterior with a damp cloth. **DO NOT** use solvents.
- 6.2. **TANK CLEANING:**
After each use or when the tank is full of dust (which will cause suction decrease), remove from mains the electricity supply and clean the dust away from inside
 - 1) Unfasten the locking clip, lift off the top cover.
 - 2) Take off the cloth filter clean the dust out of the tank.
 - 3) Install the cloth filter bag back and place the top cover.
- 6.3. **CLOTH FILTER CLEANING:**
The cloth filter should be washed by clean and warm water when to remove dust. If necessary, use neutral detergent to wash.
- 6.4. **STORAGE:** When not in use, store the cleaner in a safe, dry, childproof location, away from sunlight and high temperatures.

7. END OF LIFE

- 7.1. Dismantle and recycle according to regulations in force.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk