



2 TONNE TRANSPORTACAR TROLLEY

MODEL NO: **RE89**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear safety footwear



Wear safety gloves

1. SAFETY

- ✓ Ensure the trolley is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. Use genuine parts only. The use of improper parts may be dangerous and will invalidate the warranty.
- ❑ **WARNING!** Prepare the vehicle ready for resting and moving on the trolley. Ensure the vehicle will not move, tip, fall etc once it has been seated on the trolley. Take any necessary precautions to protect persons, property and equipment when using this trolley.
- ✓ Locate the trolley in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use trolley on level and solid ground, preferably concrete. Avoid tarmac as trolley may sink in.
- ✓ Ensure the vehicle engine is switched off .
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep a safe distance whilst the trolley is in use.
- ✓ Only place trolley under those lifting points recommended by vehicle manufacturer (see vehicle hand book).
- ✓ Check the lifting point is stable and correctly held in trolley supports.
- ✓ Ensure the trolley wheels are free to move and that there are no obstructions.
- ✓ Ensure you have a clear view and necessary assistance when transporting vehicle.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before moving.
- ✓ When stationary, always lock the two brake wheels.
- ✗ **DO NOT** operate the trolley if damaged.
- ✗ **DO NOT** allow untrained persons to operate the trolley.
- ✗ **DO NOT** exceed the rated capacity of the trolley.
- ❑ **WARNING! DO NOT** use the trolley to hold and move a vehicle which is unstable.
- ✗ **DO NOT** allow the vehicle to move on the trolley.
- ✗ **DO NOT** move vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- ✗ **DO NOT** work under the vehicle unless supported by axle stands which have been correctly positioned.
- ✗ **DO NOT** ride on the trolley.
- ✗ **DO NOT** use the trolley without appropriate supports.
- ✗ **DO NOT** use the trolley for purposes other than which it is intended.
- ✓ When not in use store trolley in a safe, dry, childproof area.




2. INTRODUCTION

Steel frame designed for supporting and moving partly dismantled or badly damaged vehicles around the workshop or bodyshop. Sliding castor brackets adjust for width and rubber-faced support pads adjust for height.

3. SPECIFICATIONS

Model No:.....	RE89
Capacity:.....	2000kg
Min. height:.....	300mm
Max. height:.....	390mm
Max. width:.....	1485mm
Castor diameter.....	Ø150mm

4. ASSEMBLY

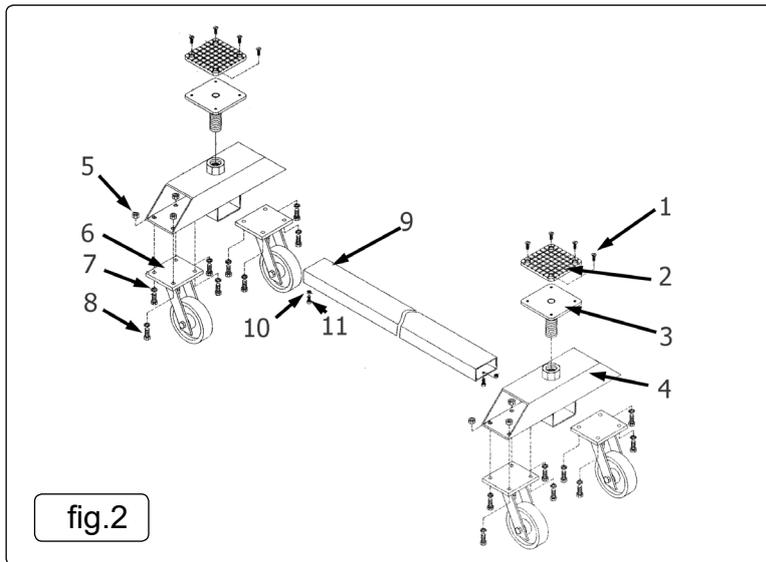

Item	Description	Qty.	Part no.
1	Screw	8	
2	Rubber pad	2	RE89.1
3	Saddle	2	RE89.1A
4	Support beam	2	RE89.2
5	Nut M10	16	RE89.5
6	Caster	4	RE89.7
7	Spring washer	16	RE89.4
8	Bolt M10x25	16	RE89.6
9	Beam	1	RE89.3
10	Nut M6	2	
11	Bolt M6x16	2	

- 4.1. Assemble the two saddles (fig.2.3) with support pads (fig.2.2) using screws (fig.2.1).
- 4.2. Assemble support beams (fig.2.4) with four caster assemblies (fig.2.6) using nuts, spring washers and bolts.
- 4.3. Slide assembled support beams onto the main beam support .
- 4.4. Assemble main beam travel stops (fig.2.9) using M6x16 bolt and nut. Set bolt protrusion to be enough to prevent the support beams from sliding off the main beam.
- 4.5. Screw assembled saddles into support beams and lightly nip place for stowage until it is used.
- 4.6. Lightly lubricate caster wheel hubs.

5. OPERATION

- WARNING!** Before use, ensure Section 1 safety instructions are read and understood.
- 5.1. Check and prepare the vehicle as mentioned in the safety instructions, ensuring the ground on which the trolley is to travel is level and solid (not tarmacadam).
 - 5.2. Set saddles to correct height and width for vehicle to be transported by sliding support beam along the main beam and then screwing in or out of support beam.
 - 5.3. Position the trolley supports under the vehicle manufacturer's recommended lifting point. Check that the vehicle is secure and there are no persons or obstacles beneath the vehicle or in the path of transportation.
 - 5.4. When the trolley destination is reached, the trolley wheels must be chocked to stop further movement.
- * **DO NOT** use trolley as a support stand for working on, or under, the vehicle. The trolley is designed for manoeuvring only.

6. MAINTENANCE

- 6.1. Before each use check for broken, cracked, bent, or loose parts, or any visible damage. If any suspect item is found remove trolley from service and take necessary action to remedy the problem.
- * **DO NOT** use the trolley if believed to have been subjected to abnormal load or shock load.
- 6.2. Keep the trolley clean and periodically oil the wheel bearings.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk