



Instructions for: 2 TONNE & 3 TONNE AXLE STANDS Model No's: VS2002CR & VS2003CR

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. SPECIFICATIONS

VS2002CR	Capacity:.....4 tonnes per pair (2 tonnes each)	VS2003CR	Capacity:.....6 tonnes per pair (3 tonnes each)
	Min Height:265mm		Min Height:290mm
	Max Height:420mm		Max Height:425mm

N.B. IN ORDER TO OBTAIN THE CAPACITIES SHOWN, THE VEHICLE MUST BE EVENLY SUPPORTED BY THE TWO STANDS.

2. SAFETY INSTRUCTIONS

- ✓ Ensure axle stands are in good order and condition. **DO NOT** use if damaged.
- ✓ When centre column has been inserted into stand ensure the locking tab (Fig 1) is bent inward to stop the column from coming out.
- ✓ Apply vehicle handbrake and chock wheels before jacking and using stands (put automatics in 'Park')
- ✓ Raise centre column of stand and ensure the centre of the crutch is located under vehicle jacking point. Refer to vehicle handbook for jacking points.
- ✓ Ensure the centre column is locked with the locking lever down and pawl seated in a centre column groove (Fig 2).
- ✓ **DANGER! Great care must be taken to ensure you lower the vehicle slowly and carefully onto the centres of the axle stands.**
- ✓ Ensure that vehicle and stands are stable before starting work.
- x **DO NOT** use on soft ground or tarmacadam. Use on concrete only.
- x **DO NOT** use single stand. Only use in pairs.
- x **DO NOT** support more than the maximum capacity, as written on the axle stand, *per pair* (i.e. 4 or 6 tonnes *per pair*).
- x **DO NOT** use four stands on one vehicle.
- x **DO NOT** jack one end of vehicle if the other end is already on stands or the load will topple.
- x **DO NOT** use for three wheeled vehicles or trailers. Refer to maker's instructions.
- x **DO NOT** use stands if suspected to be damaged.

⚠ WARNING!


DO NOT OVERLOAD AXLE STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE AXLE STANDS. POSITION LOAD ON CENTRE OF CRUTCH ONLY. ALWAYS USE STANDS IN PAIRS ON HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS, MAY RESULT IN DAMAGE TO AXLE STANDS, LOSS OF LOAD RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY OR LOSS OF LIFE.

3. BEFORE FIRST USE

- 3.1. Insert centre column into base of stand (Fig.2).
Ensure serrated side of column will engage with locking lever mechanism.
- 3.2. Bend in locking tab using a small chisel and hammer (Fig.1).
- 3.3. Check stand is in good condition and has not suffered damage during transit.

4. OPERATION

- 4.1. Refer to vehicle handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 4.2. Position stands under jacking points.
- 4.3. To adjust stands: Hold control lever up while lifting column to required height. Push control lever down to lock pawl into column teeth (Fig.2).
- ⚠ **WARNING! ENSURE PAWL IS FULLY ENGAGED WITH TEETH.**
- 4.4. Carefully and slowly lower vehicle onto stands. Ensure load bearing points sit in the centre of the crutches and that the stands are stable.
- ⚠ **DANGER! You must follow instructions carefully and ensure you DO NOT load the stands off centre. Failure to heed these warnings may cause damage, injury or loss of life!**

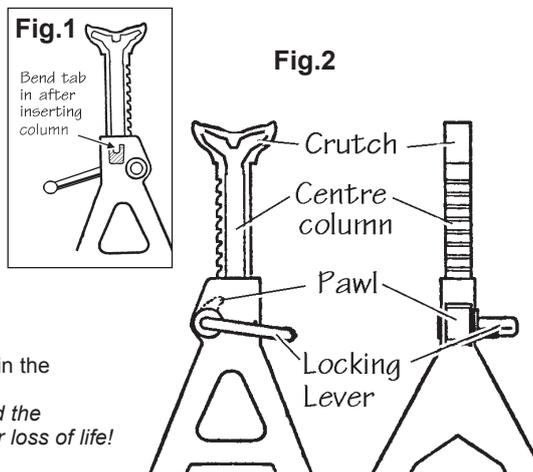

5. MAINTENANCE & INSPECTION

- 5.1. Before each use, check that stands and stand welds are not cracked and that there are no missing or damaged parts.
Any suspect axle stands must be removed from service immediately.
- 5.2. Due to the potential hazards associated with stands, do not misuse, or make any modification, to the stands or components.
- 5.3. It is the responsibility of the owner to ensure that the operator has read these instructions together with the safety features on the side of the stand and that the operator is familiar with the stands use and limitations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk