



Item	Part No.	Description
1	CP20VRS.01	Casing, Left Side
2	CP20VRS.02	Shock Absorber
3	CP20VRS.03	Gearbox
4	CP20VRS.04	Variable Speed Control Trigger Switch
5	CP20VRS.05	Resistance
6	CP20VRS.06	Battery Contact Plate
7	CP20VRS.07	Switch Lock Button
8	CP20VRS.08	Switch Lock Button Spring
9	CP20VRS.09	Casing, Right Side
10	CP20VRS.10	Tapping Screw

Item	Part No.	Description
--	CP20VBP	Power Tool Battery 20V 3Ah Li-ion for CP20V Series (NOT SUPPLIED)
--	CP20VBP2	Power Tool Battery 20V 2Ah Lithium-ion for CP20V Series (NOT SUPPLIED)
--	CP20VBP4	Power Tool Battery 20V 4Ah Lithium-ion for CP20V Series (NOT SUPPLIED)
--	CP20VRS.11	Wood Cutting Blade (NOT SHOWN)
--	CP20VRS.12	Metal Cutting Blade (NOT SHOWN)
--	CP20VMC	Battery Charger 20V Lithium-ion for CP20V Series (NOT SUPPLIED)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.