



Item	Part No.	Description
1	SGA4.V2-01	Body
2	SGA4.V2-02	Screw For Knob
3	SGA4.V2-03	Adjusting Screw
4	SGA4.V2-04	Knob
5	SGA4.V2-05	Housing Cap
6	SGA4.V2-06	Spring Plate
7	SGA4.V2-07	Spring (L..P)
8	SGA4.V2-08	Seat Holder Nut
9	SGA4.V2-09	Diaphragm Plate
10	SGA4.V2-10	Slip Ring
11	SGA4.V2-11	Diaphragm
12	SGA4.V2-12	Seat Holder

Item	Part No.	Description
13	SGA4.V2-13	Encapsulated Seat
14	SGA4.V2-14	Valve
15	SGA4.V2-15	Spring Holder
16	SGA4.V2-16	Spring (HP)
17	SGA4.V2-17	Valve Pin
18	SGA4.V2-18	Outlet Nipple
19	SGA4.V2-19	Inlet Nut
20	SGA4.V2-20	Inlet Stem
21	SGA4.V2-21	Filter
22	SGA4.V2-22	Gauge (LP)
23	SGA4.V2-23	Gauge (HP)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.