



# DISPOSABLE WELDING MASK

MODEL NO: **SSP155DX.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

## 1. SAFETY

### 1.1. GENERAL SAFETY

- WARNING!** Put the mask on before entering an area containing airborne contaminants and wear at all times during exposure in a contaminated atmosphere. This mask does not supply oxygen. Use only in adequately ventilated areas containing sufficient oxygen to support life. The mask does not protect the user against radioactive particles, viruses and enzymes.
- ✓ Before use, check that the mask will provide the required level of protection in the environment in which it is to be used.
- ✓ Inspect the mask to ensure there are no tears or snags and that it is in good condition.
- ✓ Discard the mask after single use.
- ✗ **DO NOT** use the same mask for more than 8 hours.
- ✗ **DO NOT** use when concentrations of contaminants are unknown or immediately dangerous to health or life.
- ✗ **DO NOT** alter or modify this mask in any way.

### 1.2. PERSONAL PRECAUTIONS

- ✓ Ensure there is another person within sight close enough to come to your aid should a problem arise when working.
- ✓ Leave the work area immediately and return to fresh air if breathing becomes difficult, or if dizziness or other signs of distress occur.


## 2. INTRODUCTION

- 2.1. The filtering half mask SSP155DX has been approved according to EN149 as an FFP2S respirator. When worn properly and given adequate care, SSP155DX provides excellent protection against the hazard of welding fumes. The mask provides protection subject to the concentration of the contaminant being no more than 10 times the recommended Occupational Exposure Limit.



### 3. FITTING INSTRUCTIONS

- ❑ **WARNING!** Ensure the mask is correctly fitted before use.

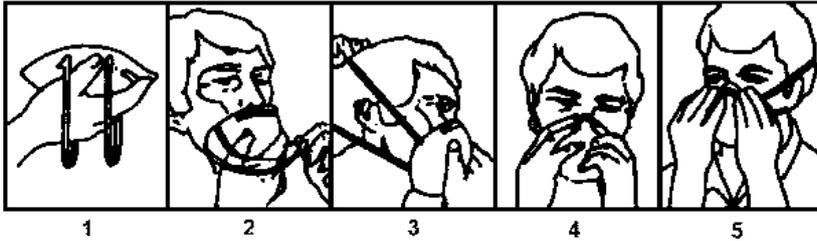

- 3.1. Hold the mask in your hand with the nosepiece at your fingertips. Allow the headbands to hang freely below your hand.
- 3.2. Cup the mask firmly against your face with the nosepiece on the bridge of your nose.
- 3.3. Stretch and pull the lower headband over the head and position below your ears.
- 3.4. Stretch and pull the top headband on the back of your head above your ears.
- 3.5. Press soft nosepiece to conform snugly around the nose.
- 3.6. Test the fit of the mask by cupping both hands over the mask and inhaling sharply. A negative pressure should be felt inside the mask.

- Notes:
- a) If air flows around your nose, tighten the nosepiece.
  - b) If air leaks around the edges, reposition the headbands for better fit.
  - c) Facial hairs or beards and certain facial characteristics may reduce the effectiveness of the mask.

### 4. STORAGE

Keep the mask in the closed box in a dry and clean place until required for use. Keep away from direct sunlight.

#### ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk