

2M STEEL WORKBENCH WITH DRAWER

MODEL NO: AP3020.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



instruction manual

1. SAFETY

- □ WARNING! Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this bench.
- ✓ Locate bench in a suitable working area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- WARNING! Use bench on level and solid ground, preferably concrete. Avoid tarmacadam since the bench may sink into the surface.
- ✓ Keep the bench clean and tidy in accordance with good workshop practice.
- ✓ Keep children and unauthorised persons away from the working area.
- □ WARNING! This bench is not electrically insulated and is therefore not suitable for electrical repairs of any sort.
- DO NOT use the bench for any purpose other than that for which it is designed.
- **DO NOT** carry out any work on the bench without the work piece being adequately secured. Use clamps or a vice (not included) to secure the work piece (available from your Sealey stockist).
- DO NOT use the bench outside.
- DO NOT get the bench wet, or use in damp or wet locations or areas where there is condensation.
- **DO NOT** clean the bench with any solvents which may damage the paint surface.
- WARNING! These workbenches are heavy and assistance should be obtained before assembling or moving them.

2. INTRODUCTION

Supplied with a single lockable drawer for tools and valuables. Manufactured from industrial steel plate for strength and long-term durability. Gloss coating protects against rust and wear. Includes bottom shelf for added storage and organisation.

3. SPECIFICATION


Model no	AP3020.V2	
Nett Weight:	64.00kg	
Size (W x D x H):	2000 x 650 x 865mm	
Capacity (Bench Top)*:	900kg	

4. CONTENTS

ITEM	QUANTITY	ITEM	QUANTITY
Workbench top	1	Self tapping screws	2
Lower shelf	1	Bolts	16
Drawer & retaining plate	1	Nuts	16
Legs	4	Washers	32

Also see attached parts information.

Original Language Version AP3020.V2 Issue: 1 15/09/25

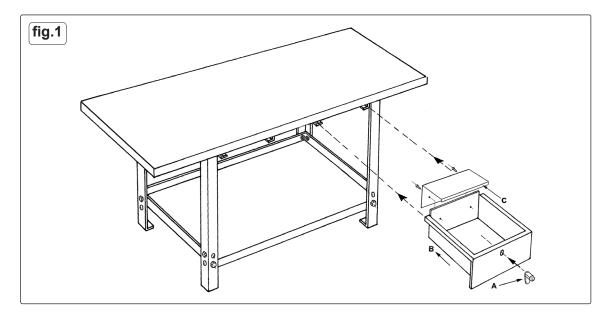

- 4.1. Remove all parts and fixings from the box. Ensure that you have adequate help to remove the bench top from the box (It is too heavy for one person to safely lift).
- 4.2. Check the contents against the parts listed. Should there be any damaged or missing parts contact your supplier immediately.

5. ASSEMBLY

- □ WARNING!: The workbenches are heavy. One person should not attempt to move the unassembled bench in the box, on their own.
- 5.1. Ensure that there is adequate manpower or lifting equipment to place the box in the area in which it is intended to carry out the assembly. Ensure that the box is the right way up by referring to the symbols printed on the side of the box. Remove all parts and fixings from the
- 5.2. Ensure that you have adequate help to remove the bench top from the box as it is too heavy for one person to lift safely.
- 5.3. Unpack workbench and check to make sure that it has not been damaged during transit and check the contents against the contents list.
- 5.4. Should there be any damaged or missing parts contact your supplier immediately.
 Note: All four legs of the workbench are identical.

5.5. REAR LEGS

- 5.5.1. Rest the workbench top on its rear edge.
- 5.5.2. Align the two holes at the top of one of the legs with the two holes located at the rear of the mounting bracket.
- 5.5.3. Insert a bolt with a washer through each of the holes of the leg and then through the mounting bracket holes.
- 5.5.4. Place a washer and nut onto each of the bolts and hand tighten (fig.2).
- 5.5.5. Repeat steps for the other rear leg.
 - Note: DO NOT fully tighten the nuts at this time.

5.6. FRONT LEGS


- 5.6.1. Align the two holes at the top of one of the legs with the two holes located at the front of the mounting bracket.
- 5.6.2. Insert a bolt with a washer through each of the holes of the leg and then through the mounting bracket holes.
- 5.6.3. Place a washer and nut onto each of the bolts and hand tighten (fig.2).
- 5.6.4. Repeat steps for the other front leg.
 - Note: DO NOT fully tighten the nuts at this time.


5.7. LOWER SHELF

- 5.7.1. Align the holes in the lower shelf with the holes in the legs.
- 5.7.2. Insert a bolt with a washer through each of the holes in the legs and through the corresponding holes in the lower shelf.
- 5.7.3. Place a washer and nut onto each of the bolts and hand tighten (fig.2).
 - Note: DO NOT fully tighten the nuts at this time.
- 5.7.4. Set the workbench upright onto its feet. Make sure it is completely stable and resting on all four legs on level ground, then fully tighten all nuts and bolts.
- □ WARNING!: DO NOT place any weight on the workbench until all the nuts and bolts have been fully tightened.

5.8. DRAWER

- 5.8.1. Install the drawer by sliding it into place on the drawer runners.
- 5.8.2. Once drawer is in place on the drawer runners, align the holes of the retaining plate with the holes on the rear wall of the drawer.
- 5.8.3. Using the two self tapping screws, fasten the drawer retaining plate to the rear of the drawer.

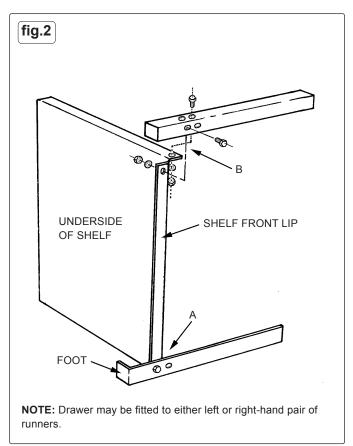

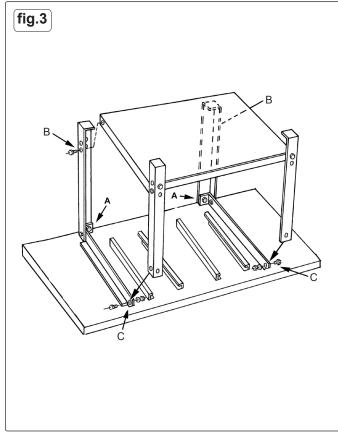



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No Liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk