



BROADCAST SPREADER 37KG WALK BEHIND

MODEL No: **SPB37W**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

1. SAFETY

- ✓ Before each use, check that there is no damage to the spreader and that all fixings are tight.
- ✓ Replace or repair damaged parts. *Use only recommended parts. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Ensure that the operator is fully trained and competent to operate the spreader.
- ✓ Ensure that all chemical safety instructions are adhered to when handling products for use in the spreader. A full range of personal safety equipment is available from your Sealey dealer.
- ✓ Always distribute the load evenly.
- ✓ Ensure all non essential personnel keep a safe distance when the spreader is in use.
- ✓ Keep hands and feet away from moving parts.
- * **DO NOT** overload the spreader - see Specification.
- * **DO NOT** leave unattended, especially when loaded.
- * **DO NOT** allow anybody to sit, stand, or ride on the spreader.
- * **DO NOT** allow untrained personnel to use the spreader.
- * **DO NOT** allow children to play in or climb onto the spreader.
- * **DO NOT** use on windy days when spreading seeds or herbicides.
- * **DO NOT** tow this spreader with a motorized vehicle of any sort.
- * **DO NOT** use the spreader for purposes other than for which it is designed.
- * **DO NOT** operate the spreader when you are tired or under the influence of alcohol, drugs or intoxicating medicines.
- ✓ When loaded, **DO NOT** operate the spreader over edges, rough surfaces etc. where the spreader is at risk of overturning.
- ❑ **WARNING!** Failure to comply with these instructions may result in damage to spreader or other property and/or personal injury.

2. SPECIFICATION

Model No. SPB37W
 Capacity (Volume) 29L
 Capacity (Volume) 37kg
 Dimensions (W x D x H) 535 x 940 x 820mm
 Spread 3-3.6M

3. INTRODUCTION


Manufactured with a strong tubular steel frame and polypropylene dispensing hopper. Fitted with nylon gear, rain cover, pneumatic tyres and adjustable feed system. Includes hopper screen to ease spreader flow and filter out unwanted contaminants. Sprays in 360° motion to cover a large area. Suitable for a variety of horticultural agents including grit, seed, salt, fertilizer and weedkiller.

Hex Bolt M6x70 4pcs 1	Hex Bolt M6x40 6pcs 2	Hex Bolt M5x45 1pc 3	Round Head Bolt M4x20 1pc 4
Flat Washer Ø16 1pc 5	Large Flat Washer Ø6 4pcs 6	Lock Nut M6 8pcs 7	Lock Nut M5 1pc 8
Axle Cap 2pcs 9	R Pin 1pc 10	Inner Axle Bush 2pcs 11	

12 Gear Box & Axle 1pc	13 Hopper 1pc	14 Impeller 1pc
15 Wheel Assembly Frame 2pcs	16 Support Leg 1pc	17 Handle Assembly 1pc
18 Wheel 2pcs	19 Support Rod 1pc	20 Hopper Screen 1pc
		21 Rain Cover 1pc

4. ASSEMBLY

fig.1

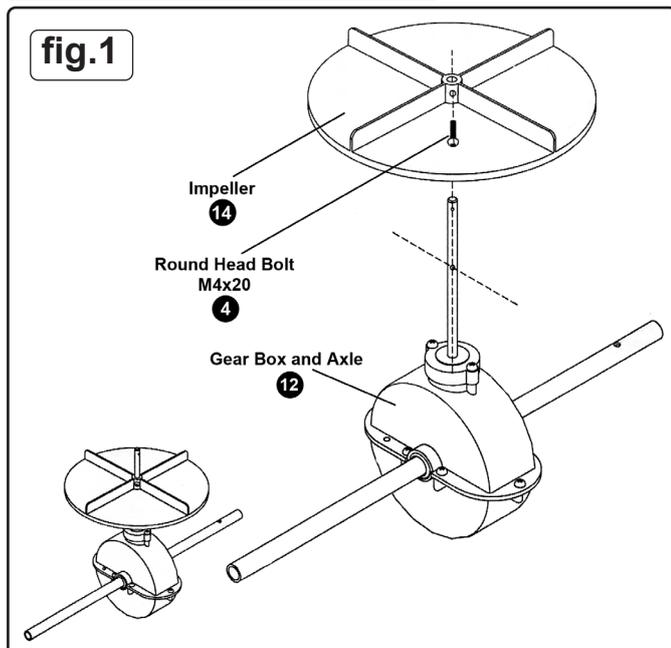


Note! Before assembly ensure there are no missing parts or fixtures.

4.1 Refer to fig.1.

4.1.1 Slide the Impeller (14) over the vertical axle on the gearbox (12).

4.1.2 Secure the Impeller to the axle with a round head bolt M4x20 (4). Ensure the impeller is secured to the lower hole on the axle.

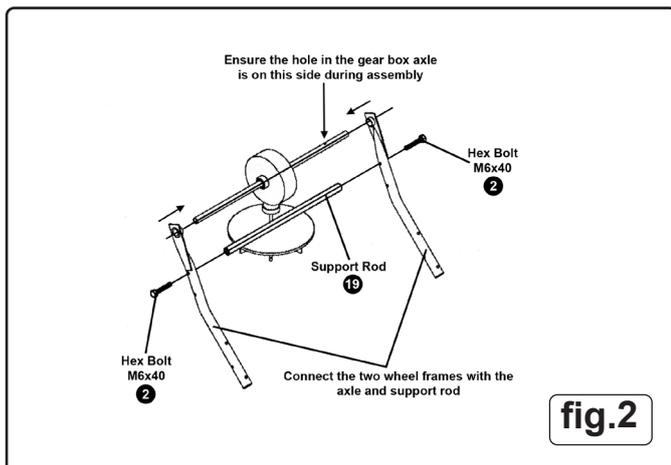


4.2 Refer to fig.2.

4.2.1 Slide the wheel frames (15) over the axle, ensure the bush housing is facing inwards.

4.2.2 Secure with support rod (19) and M6x40 hex bolts (2).


fig.3

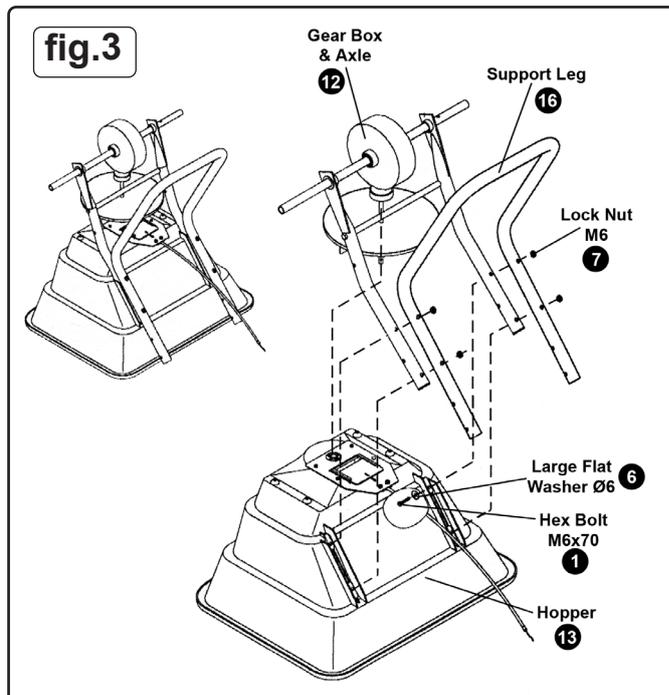

4.3 Refer to fig.3.

4.3.1 Take the hopper (13) and lay it upside down, lower the gearbox and frame onto the hopper, inserting the vertical axle through the hopper.

4.3.2 On top of the wheel frame lay the support leg (16), secure together with hex bolts M6x70 (1) with large washer (6), Inserting from inside the hopper securing with lock nuts (7) on the outside.

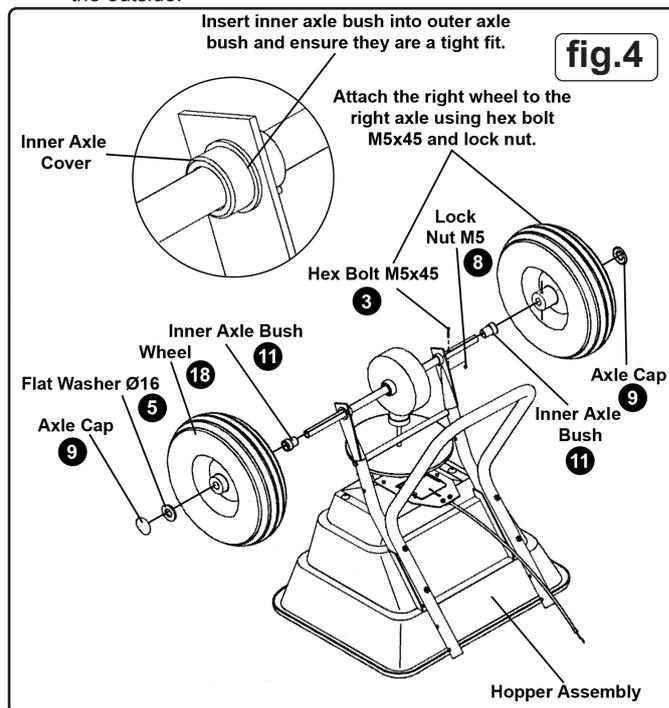

4.4 Refer to fig.4.

4.4.1 Slide the inner axle bushes (11) over the axle and push into the frame. Ensure a tight fit.

4.4.2 Put on the wheels (18). Secure the right hand wheel using hex bolt M5x45 (3) and a lock nut (8).

4.4.3 After the wheel place a flat washer (5) over the end of the axle and then the axle caps (9). Use a soft faced mallet to ensure the axle is seated correctly.

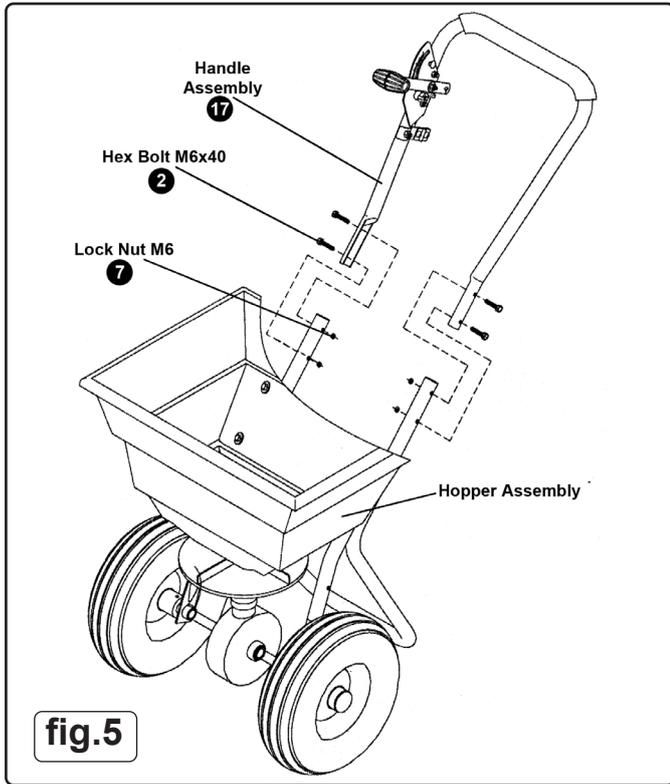


fig.5

- 4.5 Refer to fig.5.
 4.5.1 Turn the spreader onto its wheels and slide the handle assembly (17) around the frame, secure with 4 M6x40 hex bolts (2) and lock nuts (7).



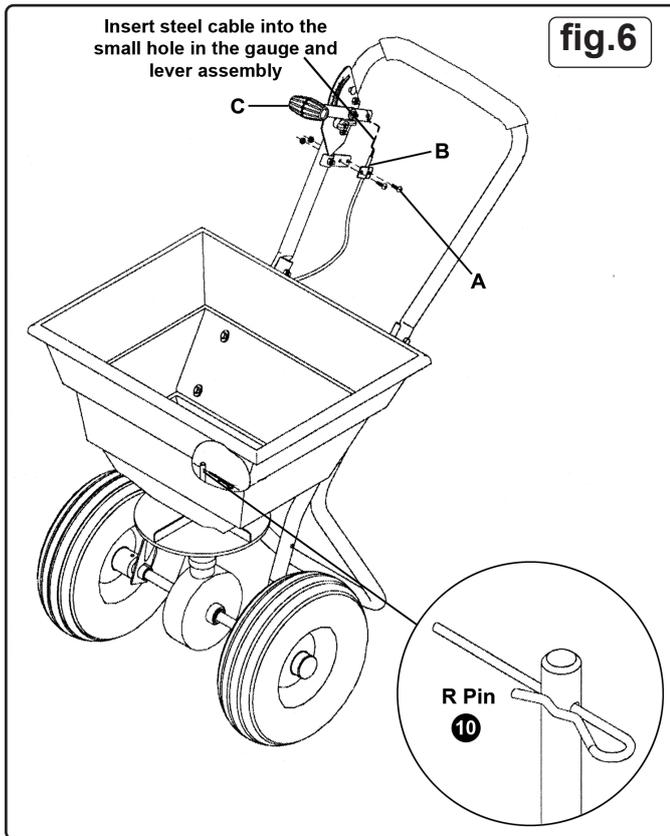


fig.6

5. OPERATION

- 5.1 The spreader is designed to be pushed at three miles an hour, which is a brisk walking pace. Slower or faster speeds will change the spread pattern. Wet fertiliser will also change the spread pattern.
- 5.2 Use the Stop bolt on the gauge to ensure the same amount of distribution.
- 5.3 See figs.7 & 8 for suggested walking patterns depending on the level of coverage you require.
- 5.4 Always start walking prior to opening the flow control plate.
- 5.5 Every time you are ready to stop, or turn to make a new pass, close the flow control plate to stop dispensing the material and continue one more stride. This reduces waste and avoids damaging a lawn with over saturated product coverage.
- 5.6 To ensure consistent coverage, make sure each broadcast pattern slightly overlaps the previous one.
- 5.7 Make sure that any broadcast material does not come into contact with trees, shrubs and flowers that could be harmed by the material.
- 5.8 Clean the spreader thoroughly after each use paying particular attention to the shut off plate and the bottom of the hopper.

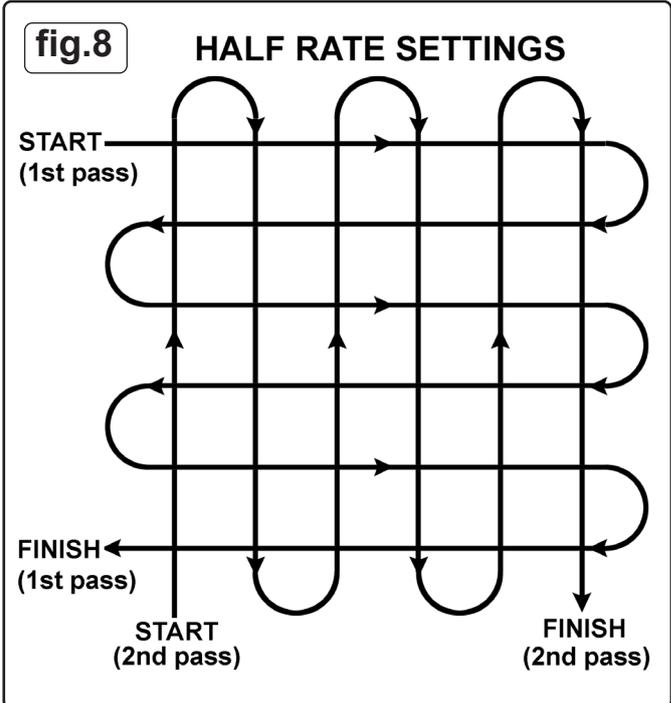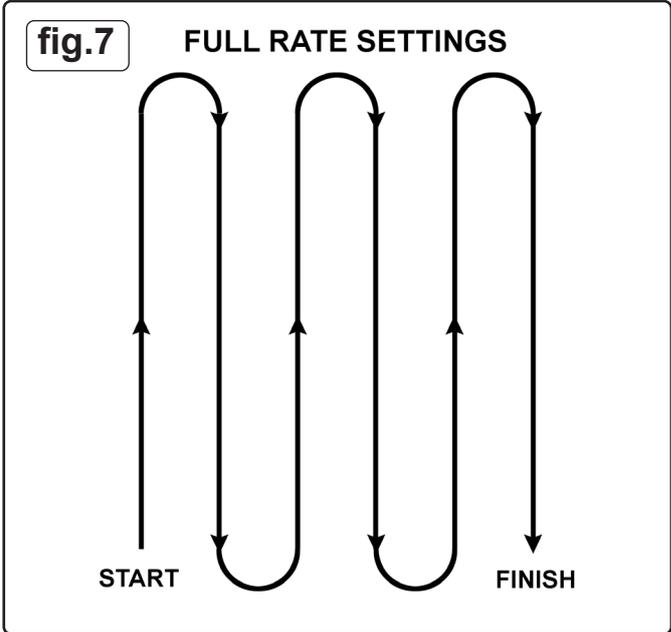

(CHART 'A') SQUARE FOOT COVERAGE PER BAG (LBS/1000SQ.FT)

WEIGHT OF BAG (LBS)	5000 SQ.FT COVERAGE	10000 SQ.FT COVERAGE	15000 SQ.FT COVERAGE
5	1.0lb	0.5lb	0.3lb
10	2.0lb	1.0lb	0.7lb
15	3.0lb	1.5lb	1.0lb
20	4.0lb	2.0lb	1.3lb
25	5.0lb	2.5lb	1.7lb
30	6.0lb	3.0lb	2.0lb
35	7.0lb	3.5lb	2.3lb
40	8.0lb	4.0lb	2.3lb
45	9.0lb	4.5lb	3.0lb
50	10.0lb	5.0lb	3.3lb
55	11.0lb	5.5lb	3.7lb

(CHART 'B') SPREADER SETTINGS/SPREADER WIDTHS

MATERIALS TO BE USED	LBS/1000 SQ.FT	G/M ²	SPREADER SETTING	SMALL PARTICLE SPREAD	MEDIUM PARTICLE SPREAD	LARGE PARTICLE SPREAD
GRIT SEED FERTILISER WEED KILLER E.T.C.	1	5	5	5-6 ft	6-9 ft	9-12 ft
	2	10	8	5-6 ft	6-9 ft	9-12 ft
	3	15	10	5-6 ft	6-9 ft	9-12 ft
	4	20	13	5-6 ft	6-9 ft	9-12 ft
	5	25	15	5-6 ft	6-9 ft	9-12 ft
	6	30	18	5-6 ft	6-9 ft	9-12 ft
	7	35	20	5-6 ft	6-9 ft	9-12 ft
	8	40	23	5-6 ft	6-9 ft	9-12 ft
	9	45	25	5-6 ft	6-9 ft	9-12 ft
	10	50	28	5-6 ft	6-9 ft	9-12 ft
	11	55	30	5-6 ft	6-9 ft	9-12 ft

5.9 CALCULATING THE AMOUNT OF MATERIAL NEEDED.
(refer to Charts 'A' & 'B')

To calculate the amount of material needed e.g lawn fertiliser, divide the coverage stated on the packaging by the weight of the fertiliser bag. For example, a 10lb bag of fertiliser with a coverage of 10,000 sq. ft. will distribute 1lb of fertiliser every 1,000 sq.ft. at full rate or 1/2lb. of fertiliser every 1,000 sq. ft. at half rate.

5.10 For pre-calculated rates see **Chart 'A'** (Example: A 25lb bag with a 15,000 sq. ft. coverage requires 1.7lb of fertiliser per 1,000 sq.ft.)

5.11 Use **Chart 'B'** to find the closest spreader setting. For example, 1.7lb per 1000 sq.ft. = spreader setting 8)

6. MAINTENANCE

6.1 After each use clean material out of hopper.

6.1.1 Rinse/dry inside and outside of spreader after each use.

6.1.2 Before operating make sure that the tyres are inflated to the correct pressure i.e. 30psi.

6.1.3 Periodically check all fastenings are tight.

6.1.4 Annually clean and lightly lubricate parts.

6.1.5 Touch up all scratched or worn painted metal surfaces.

6.1.6 To avoid damaging the spreader never exceed the rated load capacity of 37kg.

6.2 STORAGE.

6.2.1 Before storing ensure that the spreader is clean and dry.

6.2.2 Store indoors or in a protected area during severe weather and in the winter months.

6.2.3 Never allow material to stay in the hopper for extended periods of time.

**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk