



INSTRUCTIONS FOR:
**AIR DIE GRINDER MIDI SIZE
 STRAIGHT**

MODEL No: **SA652.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
 Instruction
 Manual



Wear Eye
 Protection



Wear Ear
 Protection



Wear Protective
 Gloves



Wear a Face
 Mask

1. SAFETY

- ✓ Follow all workshop Health & Safety rules, regulations and conditions when using tool.
- ☐ **WARNING!** Disconnect from air supply before changing tools or servicing.
- ✓ Maintain die grinder in good condition and replace any damaged or worn parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ☐ **WARNING!** Check correct air pressure is maintained and not exceeded. We recommended 90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ☐ **WARNING!** Before each use check tool is secure, not worn or damaged. If damaged, replace immediately.
- ✓ Ensure replacement tools are not damaged (cracks, deformations or splinters etc).
- ✓ Always use the correct tool suitable for the material being ground. Ensure the maximum speed specification of the tool is higher than that indicated on the machine data plate.
- ☐ **WARNING!** Always wear approved eye or face protection when operating the die grinder.
- ✓ Use breathing protection in accordance with COSHH regulations if fumes or dust pose a hazard. Wear ear defenders and gloves if necessary.
- ✓ Keep hands and body clear of the workpiece when operating the die grinder.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Secure unstable workpiece with a clamp, vice or other adequate holding device.
- ✓ Keep children and non essential persons away from the working area.
- ✓ Avoid subjecting tool to excessive strain, always ease against workpiece (a harsh impact may break the bit). Maintain a controlled progression.
- ✗ **DO NOT** hold the workpiece by hand. Use clamps or a vice to secure the workpiece.
- ✗ **DO NOT** use the die grinder for a task it is not designed to perform.
- ☐ **WARNING! DO NOT** use die grinder if damaged or faulty. Contact your local service agent.
- ✗ **DO NOT** use die grinder unless you have been instructed in its use by a qualified person.
- ✗ **DO NOT** carry the die grinder by the air hose, or pull the hose sharply from the air supply.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ☐ **WARNING! DO NOT** grind any materials containing asbestos.
- ✗ **DO NOT** turn the die grinder on whilst the tool is in contact with the workpiece.
- ✗ **DO NOT** use die grinder where there are flammable liquids, solids or gases such as paint solvents, including waste wiping or cleaning rags etc as generated sparks may be dangerous.
- ✗ **DO NOT** touch the workpiece close to the ground surface as it will be very hot. Allow to cool. The workpiece may also be very sharp.
- ✗ **DO NOT** operate die grinder if you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

2. INTRODUCTION

Composite cover moulded around lightweight aluminium alloy housing, reduces effects of chill on operator's hands and provides added control. Air motor with quality bearings for smooth and powerful operation. Exhaust outlet adjusts 360° keeping air flow away from operator. Safety trigger prevents inadvertent operation. Ideal for re-shaping, deburring and smoothing off rough edges on castings. Suitable for the professional workshop.

3. SPECIFICATION

Model No:	SA652
Configuration:	Straight - Midi
Collet Size:	Ø6mm
Free Speed:	2500rpm
Air Consumption:	3cfm
Operating Pressure:	90psi
Air Inlet Size:	"1/4" BSP"
Length:	155mm
Weight:	0.5kg
Noise Power/Pressure:	95/84dB
Vibration/Uncertainty:	1.25/0.61m/s ²

4. PREPARATION

4.1. Air Supply



Recommended hook-up procedure is shown in fig.1.

- 4.1.1. Ensure die grinder air valve (or trigger) is in "off" position before connecting to the air supply.
- 4.1.2. You will require an air pressure of 90psi, and an air flow according to specification.
- 4.1.3. **WARNING!** Ensure the air supply is clean and does not exceed 90psi while operating the die grinder. Too high an air pressure and contaminated air will shorten the product life owing to excessive wear, and may be dangerous causing damage and/or personal injury.
- 4.1.4. Drain the air tank daily. Water in the air line will damage the die grinder.
- 4.1.5. Clean air inlet filter weekly.
- 4.1.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 1/4" I.D. and fittings must have the same inside dimensions.
- 4.1.7. Keep hose away from heat, oil and sharp edges. Check hose for wear, and make certain that all connections are secure.

4.2. Couplings.

Vibration may cause failure if a quick change coupling is connected directly to the die grinder.

To overcome this, connect a leader hose to the grinder. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See fig.1 & 2.

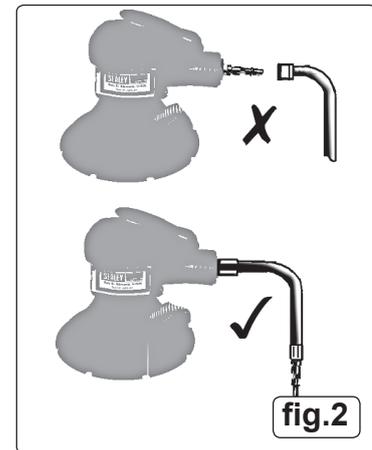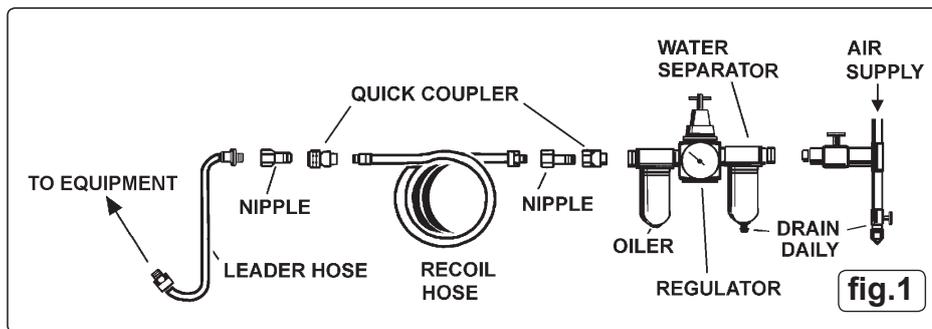

5. OPERATION

5.1. Fitting Tools

- WARNING!** Disconnect from the air supply before changing tools.
- 5.1.1. Check that tools are not damaged in any way such as cracks, deformations, splinters etc. Damaged tools must not be used.
- 5.1.2. Use wrenches enclosed to loosen the collet locking collar. Insert tool and re-lock collar.

5.2. OPERATING

- WARNING!** Ensure you have read, understood and apply safety instructions.
- 5.2.1. Connect the die grinder to the air supply.
- 5.2.2. To start, hold firmly and push the trigger locking lever forward whilst depressing trigger.
- 5.2.3. The tool must be running at its maximum speed before attempting to grind the workpiece.
- 5.2.4. Slowly and smoothly bring the tool toward the workpiece (avoid jerky movements). Exert adequate pressure on the die grinder to grind according to the type and size of the material you are working with. Avoid subjecting the tool to excessive strain or harsh impacts. Always hold die grinder firmly and ease grinding bit against the workpiece. Maintain a controlled progression.

x **DO NOT** allow die grinder to free run for an extended period of time as this will shorten its life.

6. MAINTENANCE

- WARNING!** Disconnect die grinder from air supply before changing accessories, servicing or performing maintenance. Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- 6.1. Lubricate the air die grinder daily with a few drops of Sealey air tool oil dripped into the air inlet or in the air systems oiler.
- 6.2. Clean the die grinder after use.
- 6.3. Loss of power or erratic action may be due to the following:
 - a) Excessive drain on the air line. Moisture or restriction in the air pipe. Incorrect size or type of hose connectors. To remedy check the air supply and follow instructions in chapter 3.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable dispose of it according to local regulations.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.

NOTE: It is our policy to improve products continually and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

01284 757500

01284 703534



www.sealey.co.uk



sales@sealey.co.uk

WARNING! – Risk of Hand Arm Vibration Injury.

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated in accordance with these instructions.

Measured vibration emission value (a):1.25 m/s²

Uncertainty value (k):0.61 m/s²

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

NB: Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.

Health surveillance.

We recommend a programme of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

Personal protective equipment.

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSE website www.hse.gov.uk - Hand-Arm Vibration at Work.